




# **Trolley Assembly Instruction**

**for Wildcat 3000 Pizza Oven Standard Trolley**

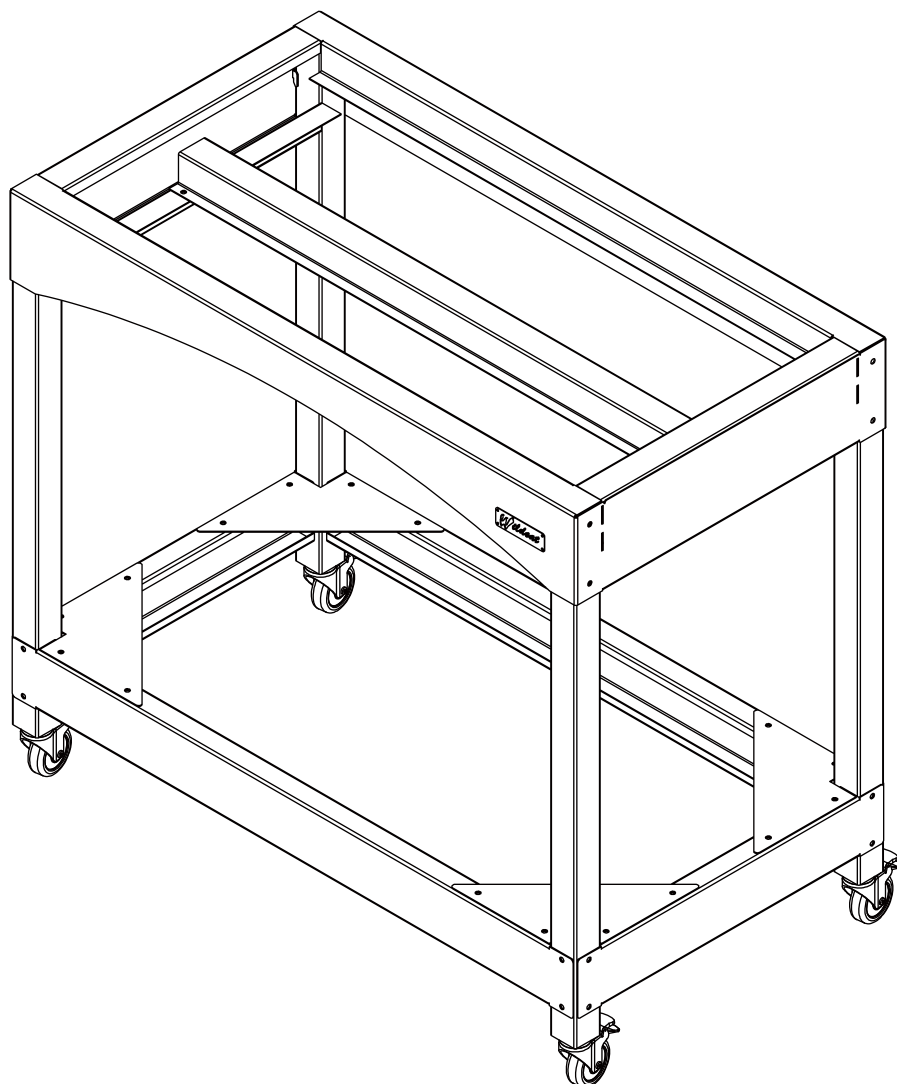

## Contents

Components .....	Page.02
Assembly main body .....	Page.03
Assembly castor wheels .....	Page.10
Assembly tables top .....	Page.12
Finished Assembly .....	Page.13
Maintenance & Safe Operation .....	Page.14
Contact Information .....	Page.15
Accessories & Other Products .....	Page.16

## Components

### Carton Contents

1 x LHS top panel

1 x RHS top panel

1 x LHS bottom panel

1 x RHS bottom panel

1 x Front panel (with Wildcat badge)

1 x Rear top panel

1 x Front bottom panel

1 x Rear bottom panel

1 x Cross brace

4 x Triangular braces

4 x 50mm square tube legs

4 x Lockable castors

48 x 6mm black pan head screws

4 x 3/8" x 1 1/2" HEX bolts


4 x 3/8" washers

**\*Tools:** - Philips head screwdriver  
- Cordless drill with philip head bit  
- 2 x sml shifters or 1 x 1/2" open  
end spanner

## Trolley Assembling Step.1


Step (1) - Unload all of the components and assemble the 'RHS' + 'LHS' bottom panels to the legs, ensure the nutserts on the legs are facing outwards and that the nutserts on the panels (both RHS + LHS) are facing up.

Using the **6mm black pan head screws**, keeping them loose (only finger tight.)

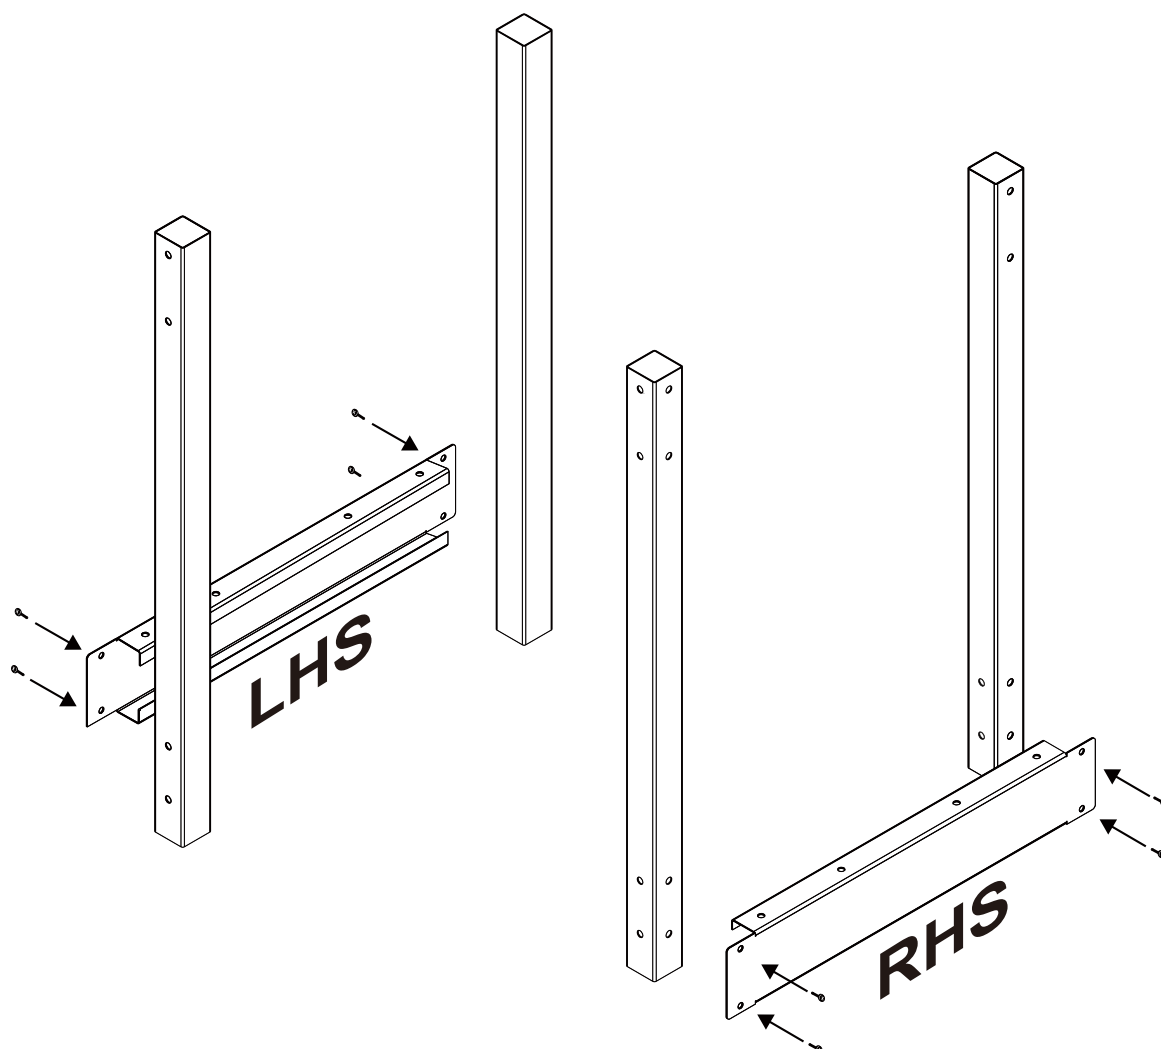

## Trolley Assembling Step.2


Step (2) - Now connect the **RHS + LHS** using the **Rear Bottom** panel (finger tight) and then the **Rear Top** panel.

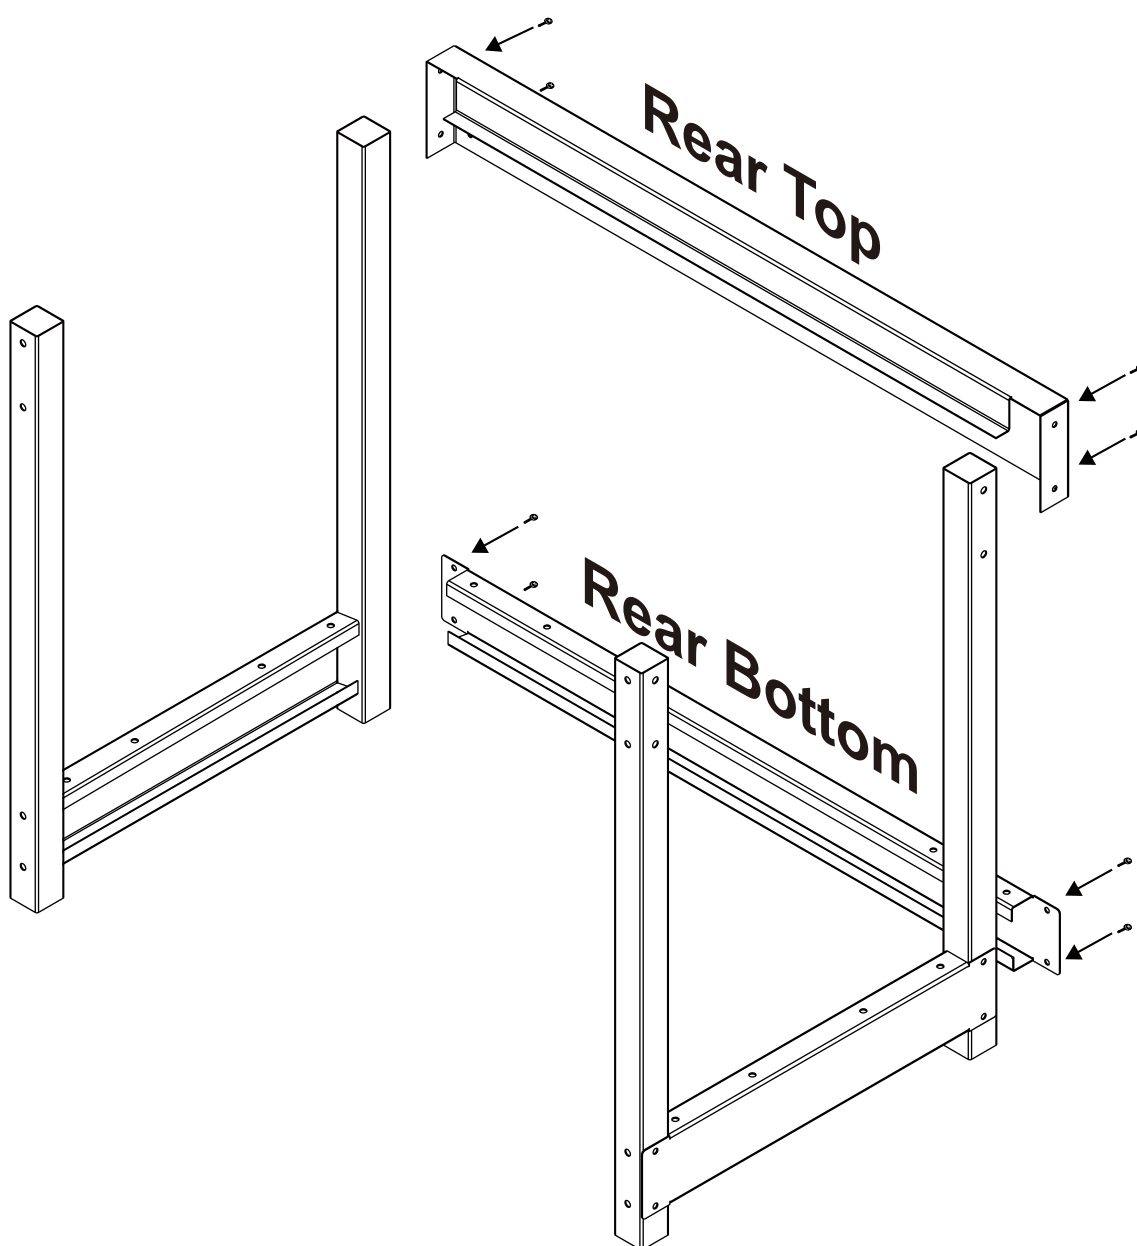

## Trolley Assembling Step.3


Step (3) - Now attach the **Front Bottom** panel.

Remember to keep all 6mm black pan head screws fingertight.

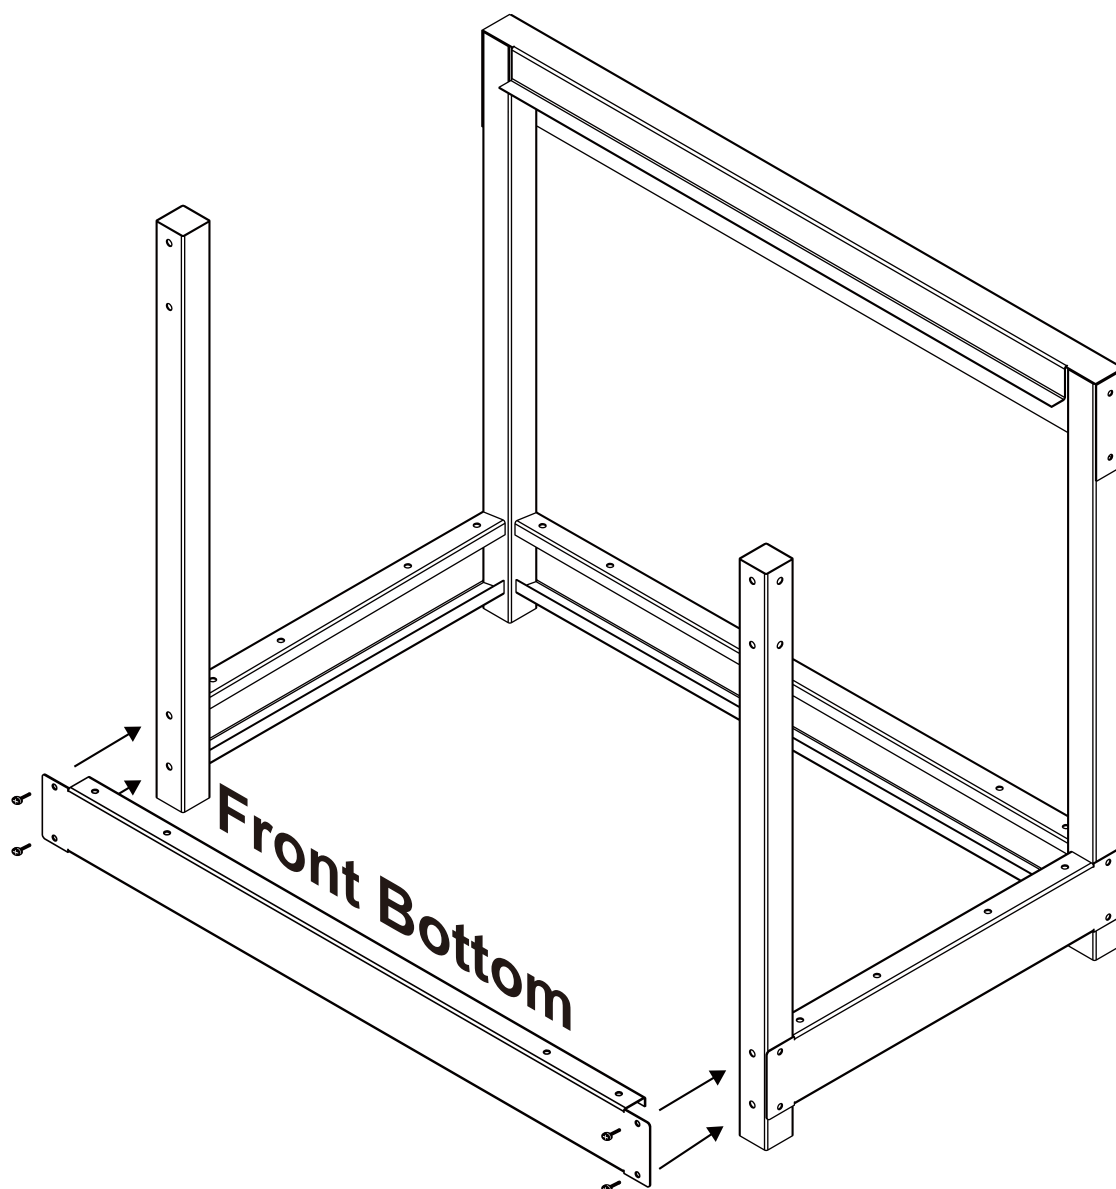


## Trolley Assembling Step.4

Step (4) - Now attach the **Front Top** panel (with the WILDCAT badge).  
Please **Don't** put the screws on it yet. Just simply sit the panel on the legs.

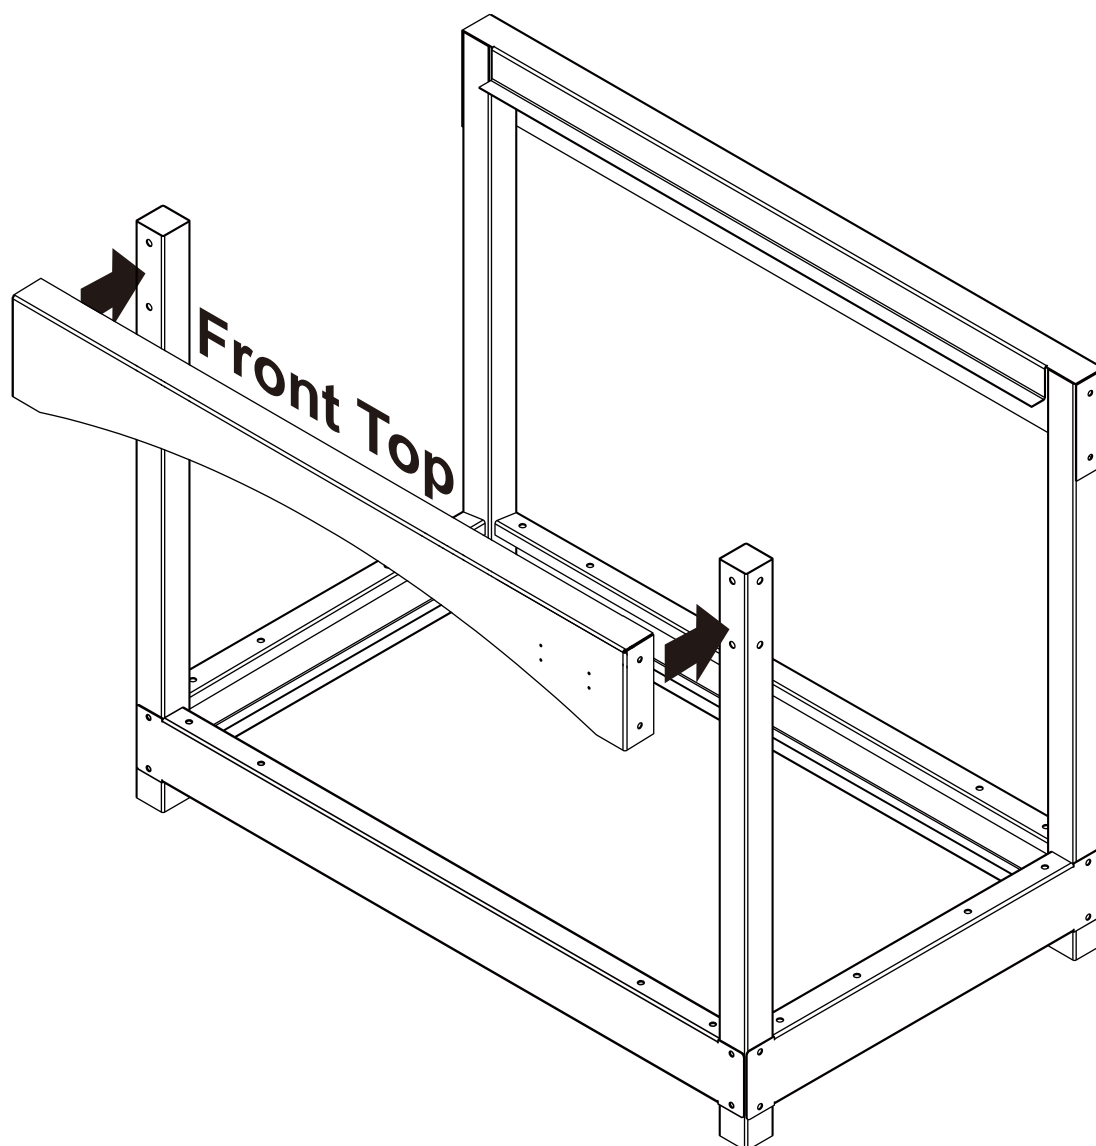

## Trolley Assembling Step.5

Step (5) - Now it's time for the two sides. Attach the **RHS + LHS Top** panels to the legs  
Use the 6mm black pan head screws again keep them fingertight.

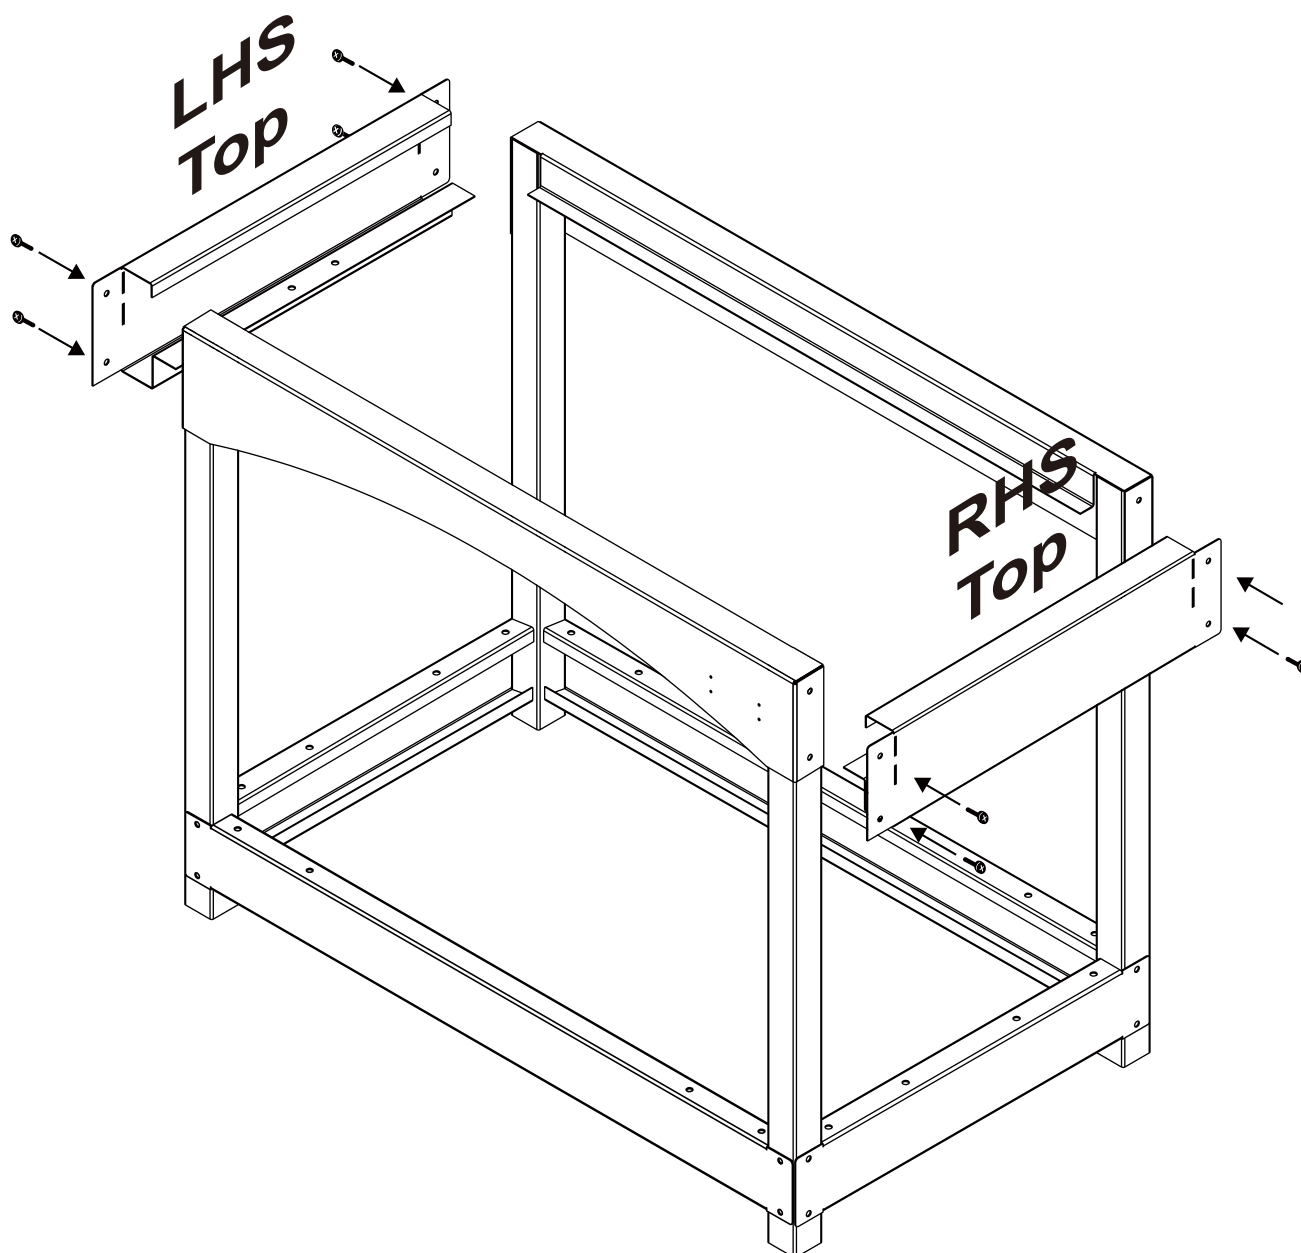




## Trolley Assembling Step.6

Step (6) - It's time to install the **Triangular Braces**. (x4)


Place them out along the four legs and use 6mm black pan head screws.

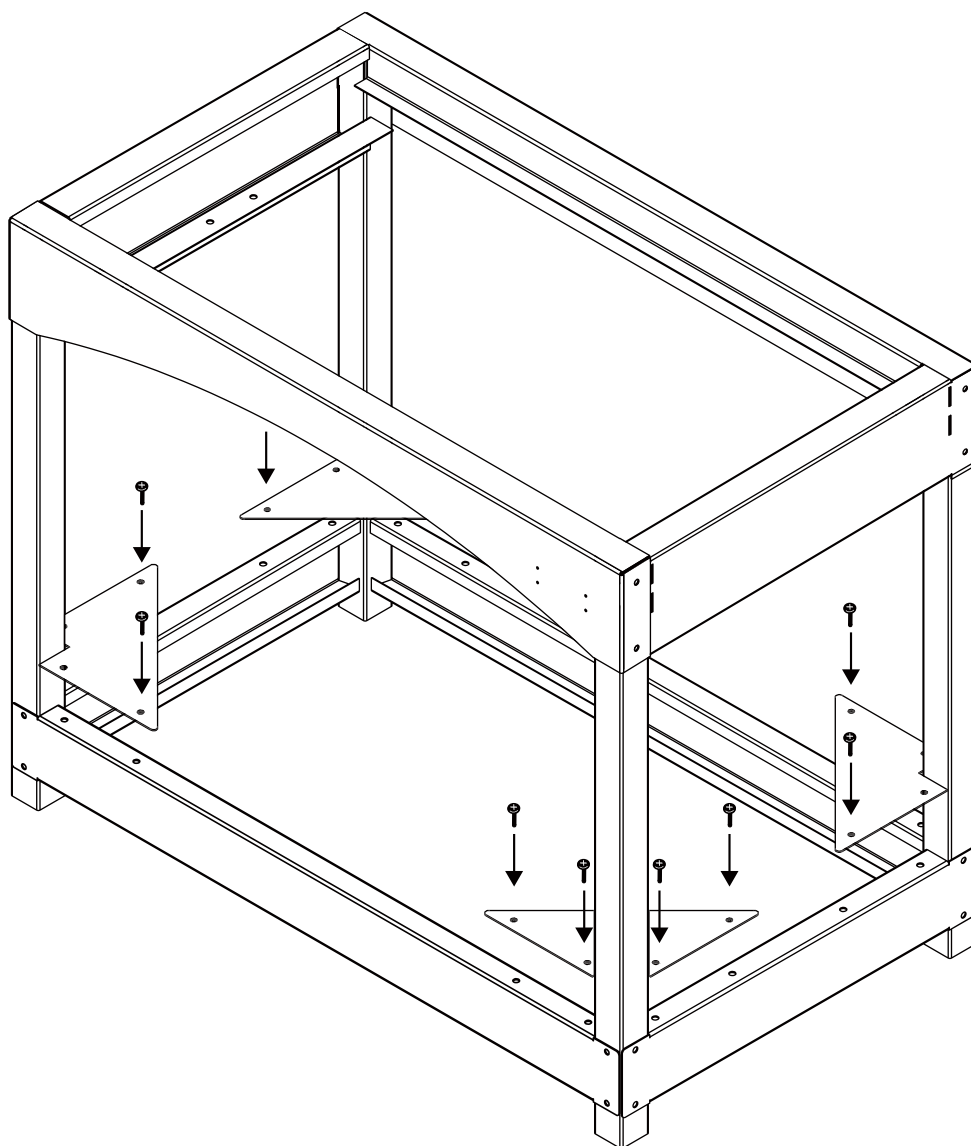

## Trolley Assembling Step.7 & 8

Step (7) - Attach the cross brace through the middle of the trolley. You can now tighten all the way.

Step (8) - Using a cordless drill go around and tighten every 6mm screw.  
Ensuring all are now tight.

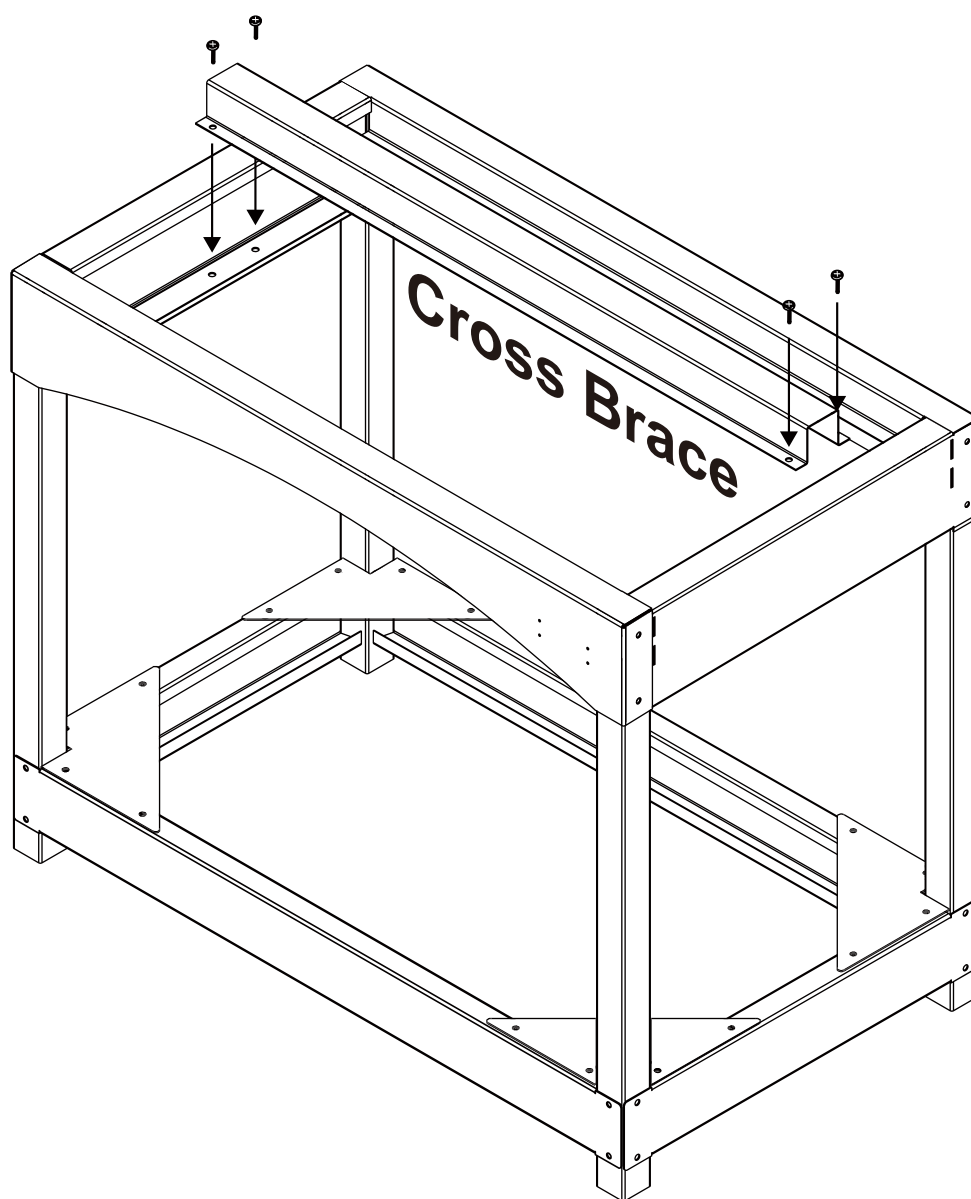


## Trolley Assembling Step.9

Step (9) - Flip the trolley upside down (180°)

You may need a second person to assist at this stage.

Please lay the trolley on something soft after you flip it over.

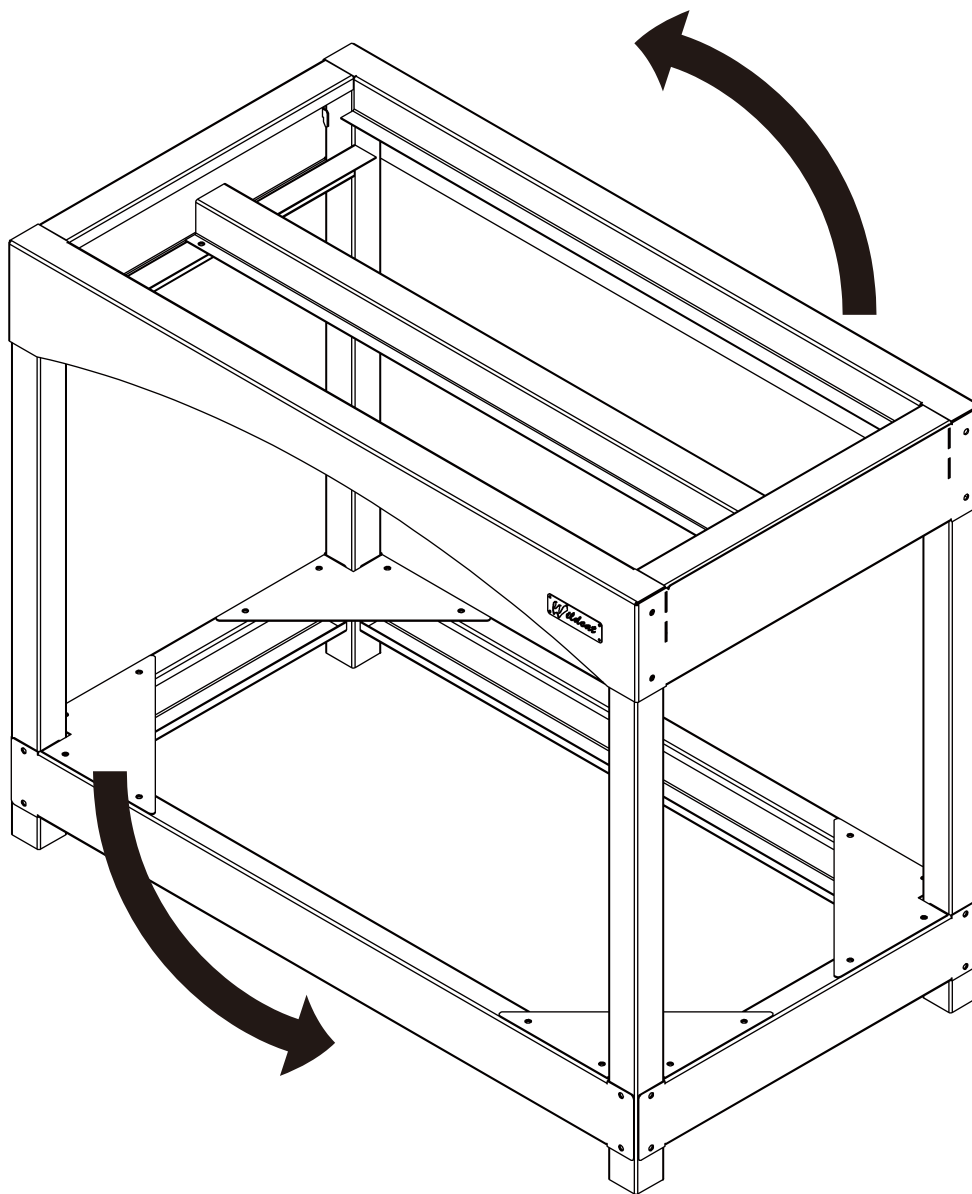

## Trolley Assembling Step.10

Step (10) - Attach all four castors to the legs.

- A.** Fit the castor brackets to each corner as shown.  
Make sure the large washer is in place over the captive nut.  
Tighten the 3/8" bolt fully before the castor wheel is fitted.

Attach the Castor bracket with the 3/8" bolt provided.



- B.** Fit each castor wheel to the brackets.




- C.** Now the caster units are ready to roll. You can now stand trolley back up right.



## Trolley Assembling Step.11


Step (11) - Insert chalk compound into the top of the trolley and push down flush with top of trolley.

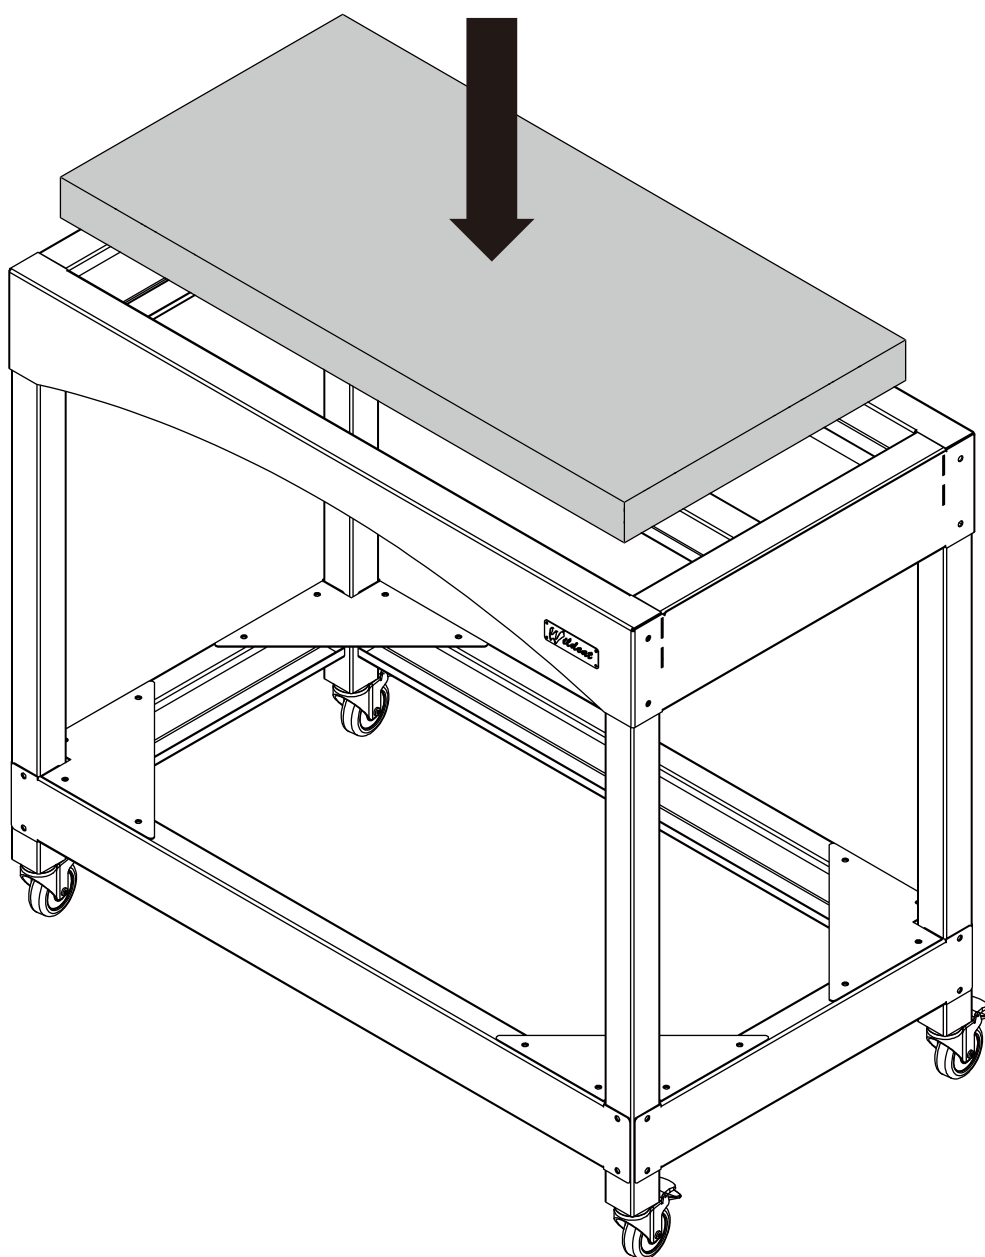

## Trolley Assembling Step.12

Step (12) - Place the Wildcat 3000 oven on top of the trolley, remove stainless steel plastic protector before first firing.

\*The side tables shown in the drawing are optional products.

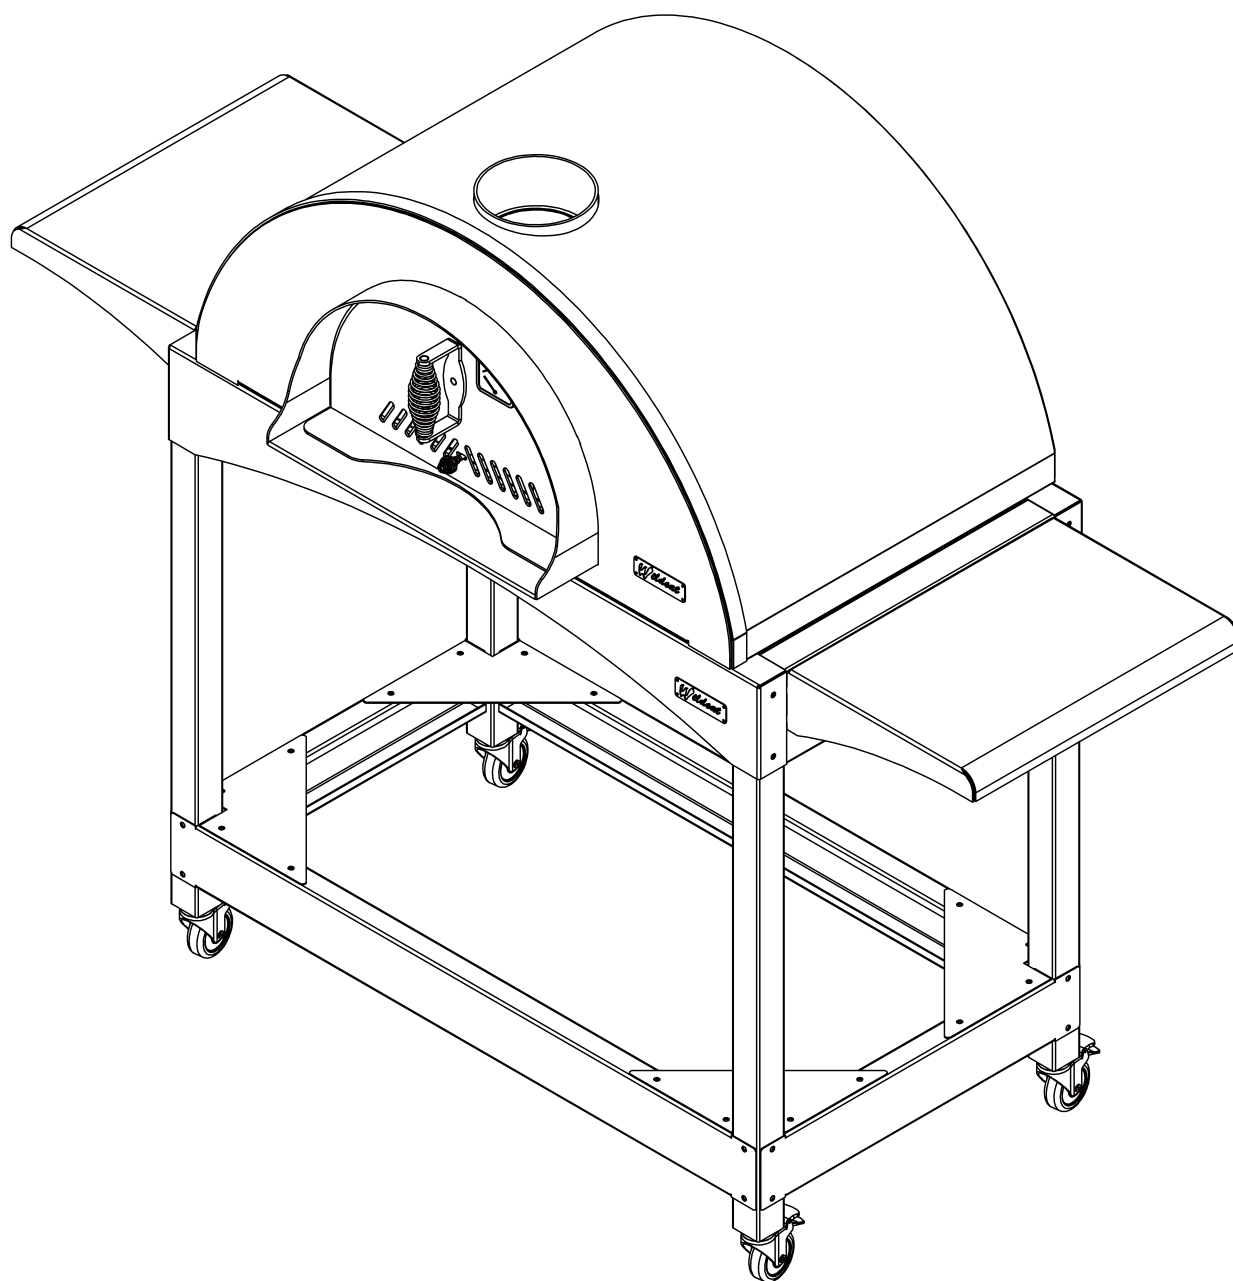

## Maintenance & Safe Operation

The heavy duty powder coated finish on your Wildcat Pizza Oven Trolley should require no more than the occasional wipe with a damp cloth to keep it looking good. Heavier food stains can be safely removed with a non abrasive proprietary household cleaner. Occasionally it may be necessary to re-tighten the screws.

### ***SAFETY WARNING:***

With a Wildcat Pizza Oven fitted, the Oven/Trolley combination is very heavy and will require a minimum of 2 adults to move it safely on flat smooth surfaces only.

- ***Do not*** attempt to move the Oven/Trolley combination on uneven ground.
- ***Never*** attempt to move the Oven/Trolley whilst there is an active fire in the oven, or while hot.
- Ensure all castors are locked before using the Oven.
- ***Do not*** operate the Oven on uneven or sloping ground.

Don't forget to check our interactive website for lots of recipes, tips and tricks and cooking video demonstrations. Members can also share their own recipes with other satisfied Wildcat Woodfired Oven owners at

**<http://www.mypizzaoven.com.au>**


We take this opportunity to thank you for your purchase and trust that you and your family will enjoy many hours of outdoor gourmet cooking!





## Contact Information

Wildcat Industries maintains a comprehensive web site for customer convenience. For service or general enquiries please try our website first, or for further assistance contact Wildcat Industries.

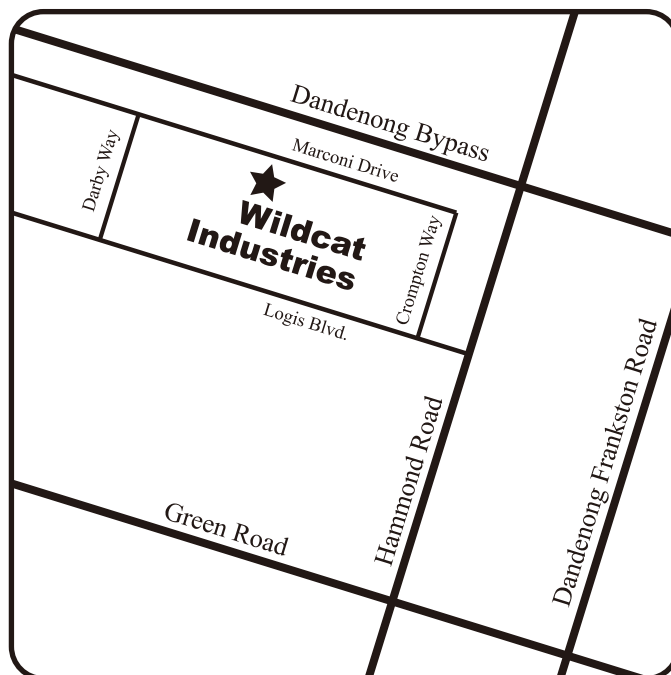

**Ad:** 35 Marconi Drive, Dandenong South, VIC 3175

**Ph:** (03) 9794 9956 **FAX:** (03) 8668 1677

**E-mail:** sales@wildcatindustries.com.au

<http://www.mypizzaoven.com.au>

<http://www.wildcatindustries.com.au>

Due to Wildcat Industries (Aust) Pty. Ltd. ongoing commitment to product quality and improvement we reserve the right to alter products and/or specifications without notice.

© Copyright 2015 Wildcat Industries (Aust) Pty. Ltd.



## Accessories & Other Products

Wildcat Industries are constantly striving to improve our existing range and develop new and innovative products. Here are just a few!


**Wildcat 3000 Oven Cover**



**Pizza Peel-stainless steel  
with a solid timber handle**



**Wildcat Side Table for Oven Trolley**

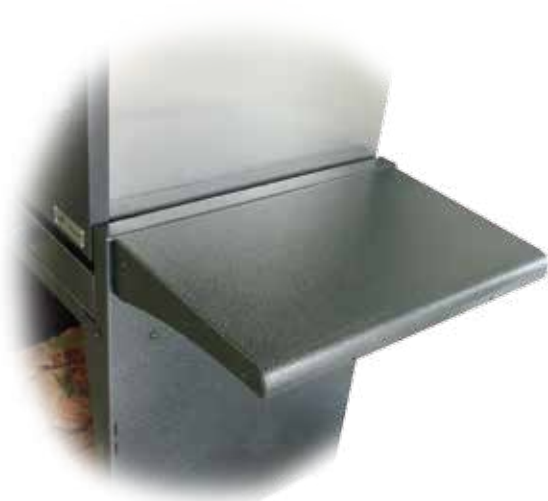

**Pizza Trays**



**Wildcat Flue Kits**

