




# **Trolley Assembly Instruction**

**for Wildcat 8000 Pizza Oven Trolley**

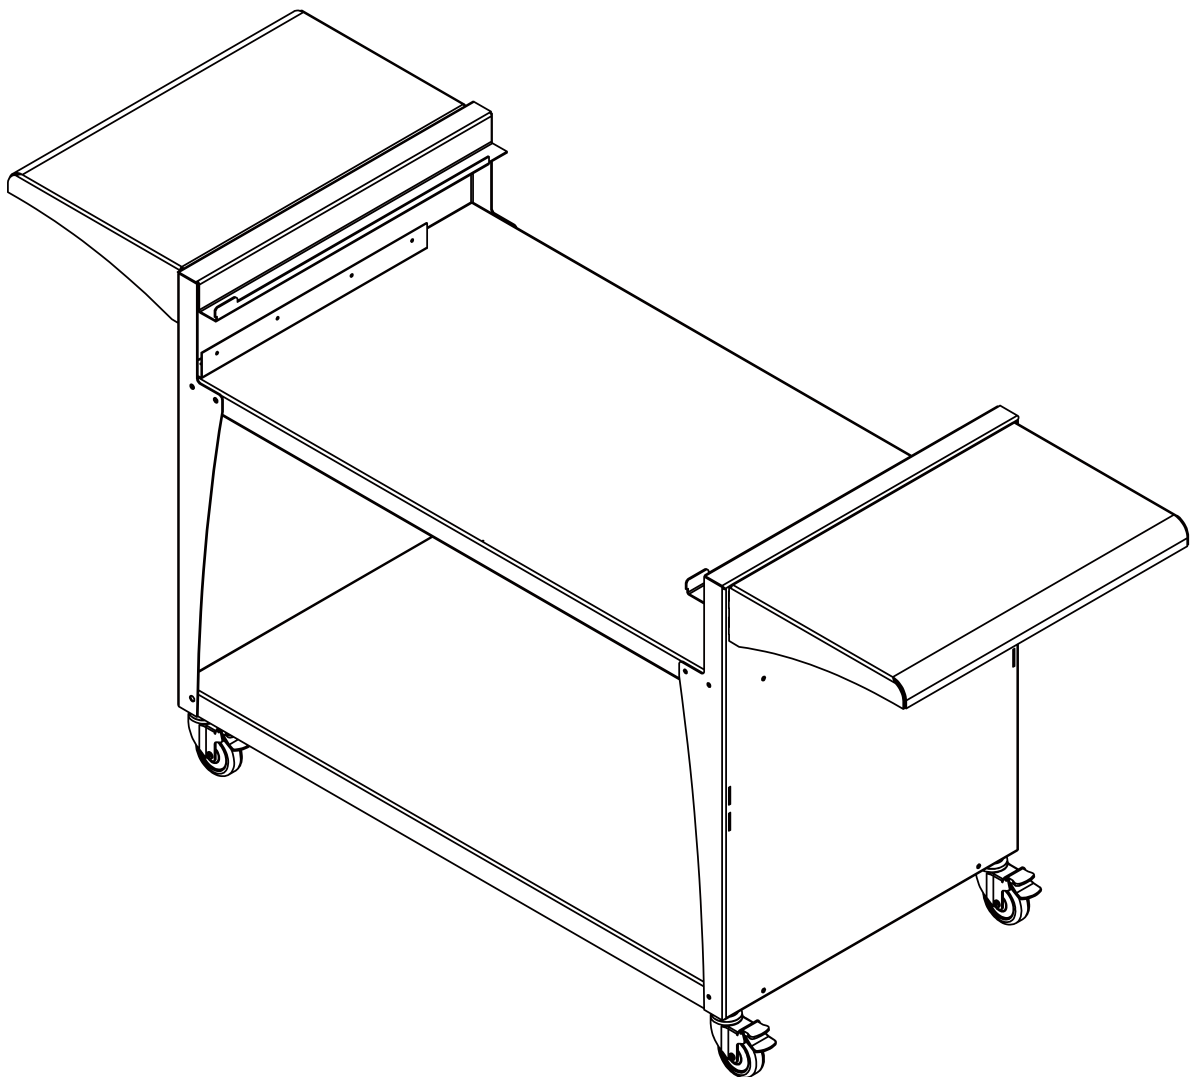

## Contents

|                                    |         |
|------------------------------------|---------|
| Components .....                   | Page.02 |
| Assembly main body .....           | Page.03 |
| Assembly castor wheels .....       | Page.08 |
| Assembly side tables.....          | Page.10 |
| Finished Assembly .....            | Page.11 |
| Maintenance & Safe Operation ..... | Page.12 |
| Contact Information .....          | Page.13 |
| Accessories & Other Products ..... | Page.14 |

## Components

### Carton Contents


- 1 x LHS leg panel
- 1 x RHS leg panel
- 1 x Top shelf panel
- 1 x Bottom shelf panel
- 2 x Side Tables (LH+RH)
- 4 x Lockable castors
- 24 x 6mm black pan head screws
- 4 x 3/8" x 1 1/2" HEX bolts
- 4 x 3/8" washers

**\*Tools:** - Philips head screwdriver  
- Cordless drill with philip head bit  
- 2 x sml shifters or 1 x 1/2" open  
end spanner

## Trolley Assembling Step.1


Step (1) - Lay the **Bottom Shelf** panel and the **LHS Leg** panel on their sides.

To attach, angle the **LHS Leg** panel approximately 75° or until you can screw the 6mm screws into nutsert situated on **Front** and **Rear** of bottom shelf unit. Remember to keep all screws loose until the end.

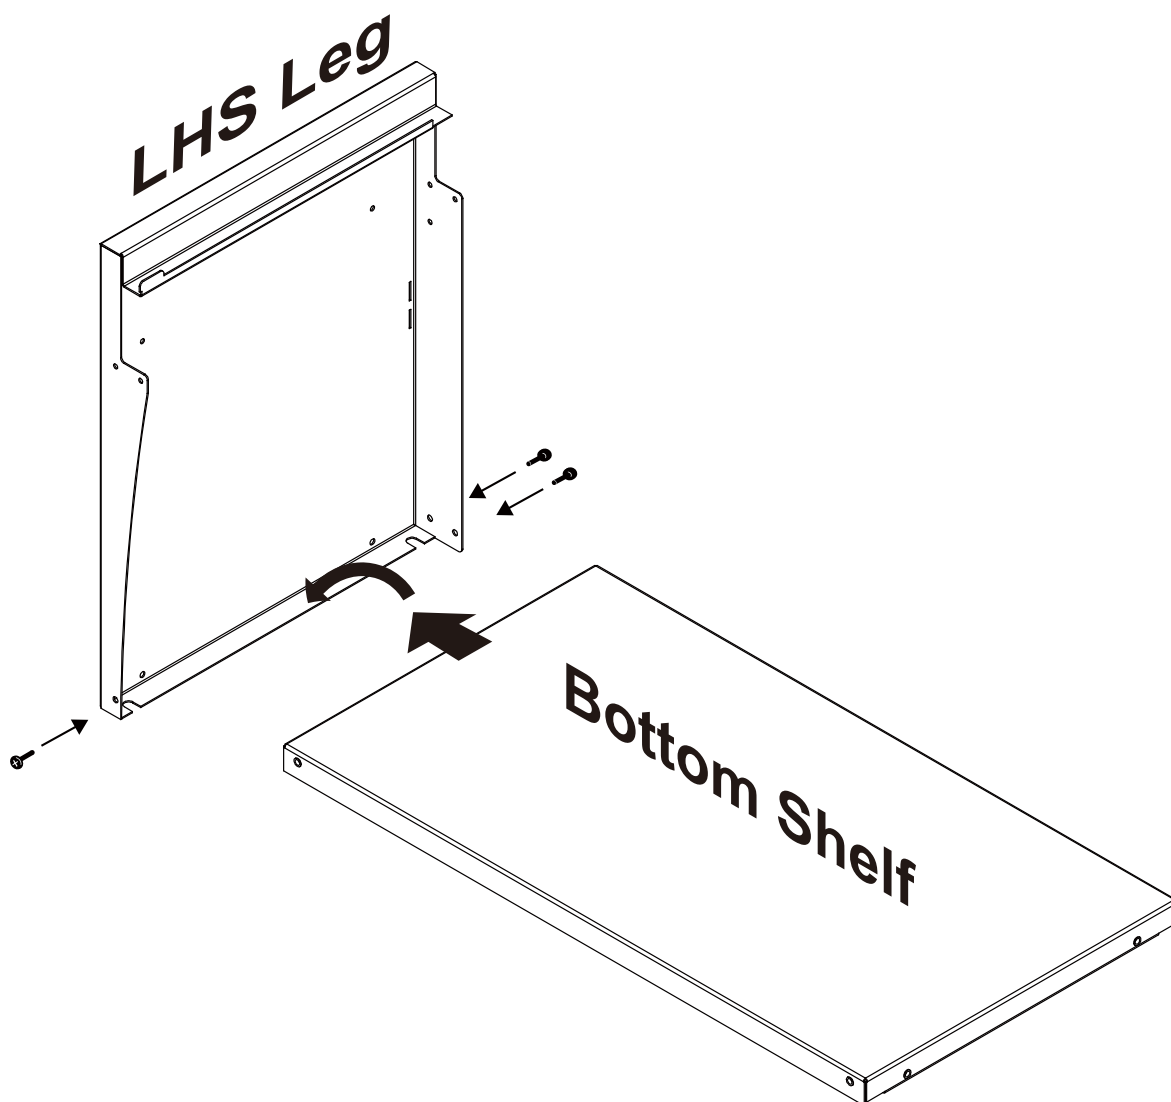


## Trolley Assembling Step.2

Step (2) - Angle **LHS Leg** panel back to original position and screw the 6mm screws on the face of the panel, to the **Bottom Shelf** panel, remember to leave them finger tight until the end.

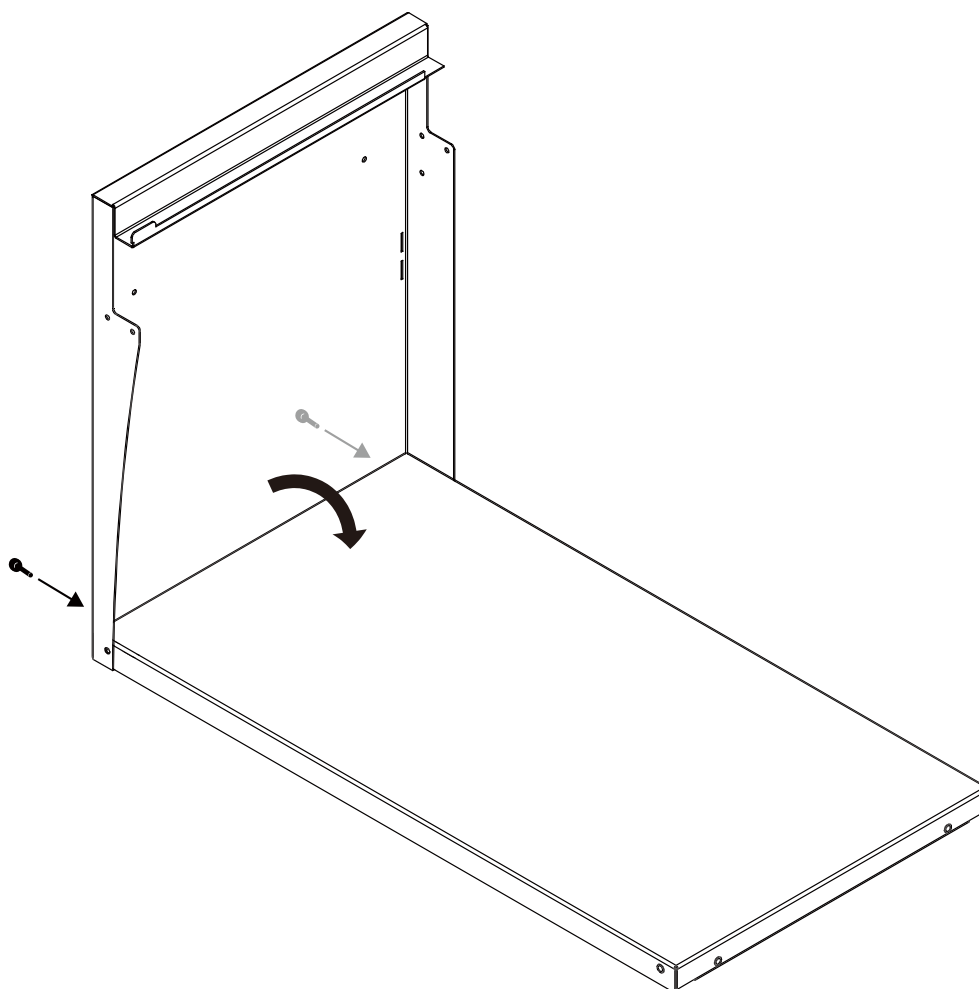


## Trolley Assembling Step.3

Step (3) - Repeat Steps (1) and (2) for the **RHS Leg** panel. Keep the 6mm screws fingertight.

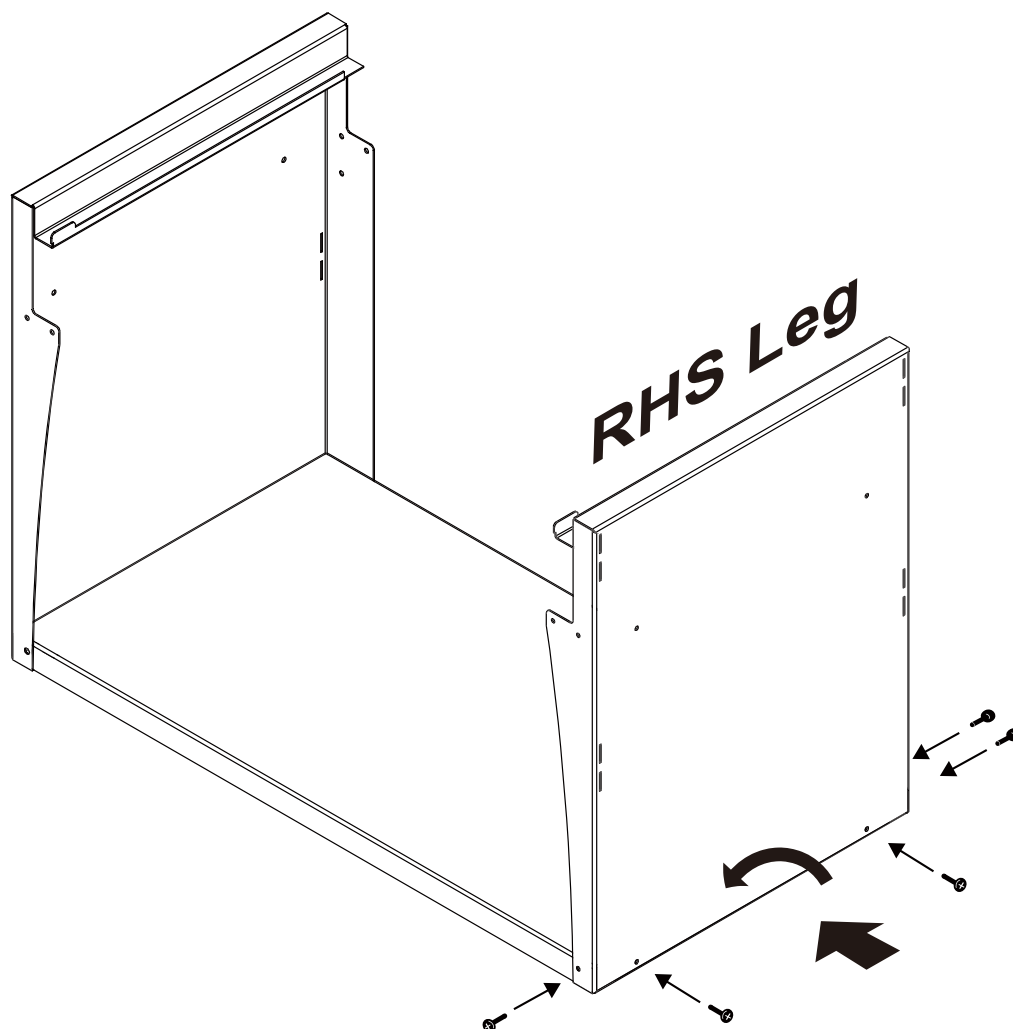


## Trolley Assembling Step.4

Step (4) - Angle **RHS Leg** and **LHS Leg** panels outwards a little without damaging the screws.  
Place the **Top Shelf** in between both **RHS Leg** and **LHS Leg** panels, angle **RHS Leg** and **LHS Leg** back to the original position.  
Use the 6mm screws to mount, leaving them fingertight.

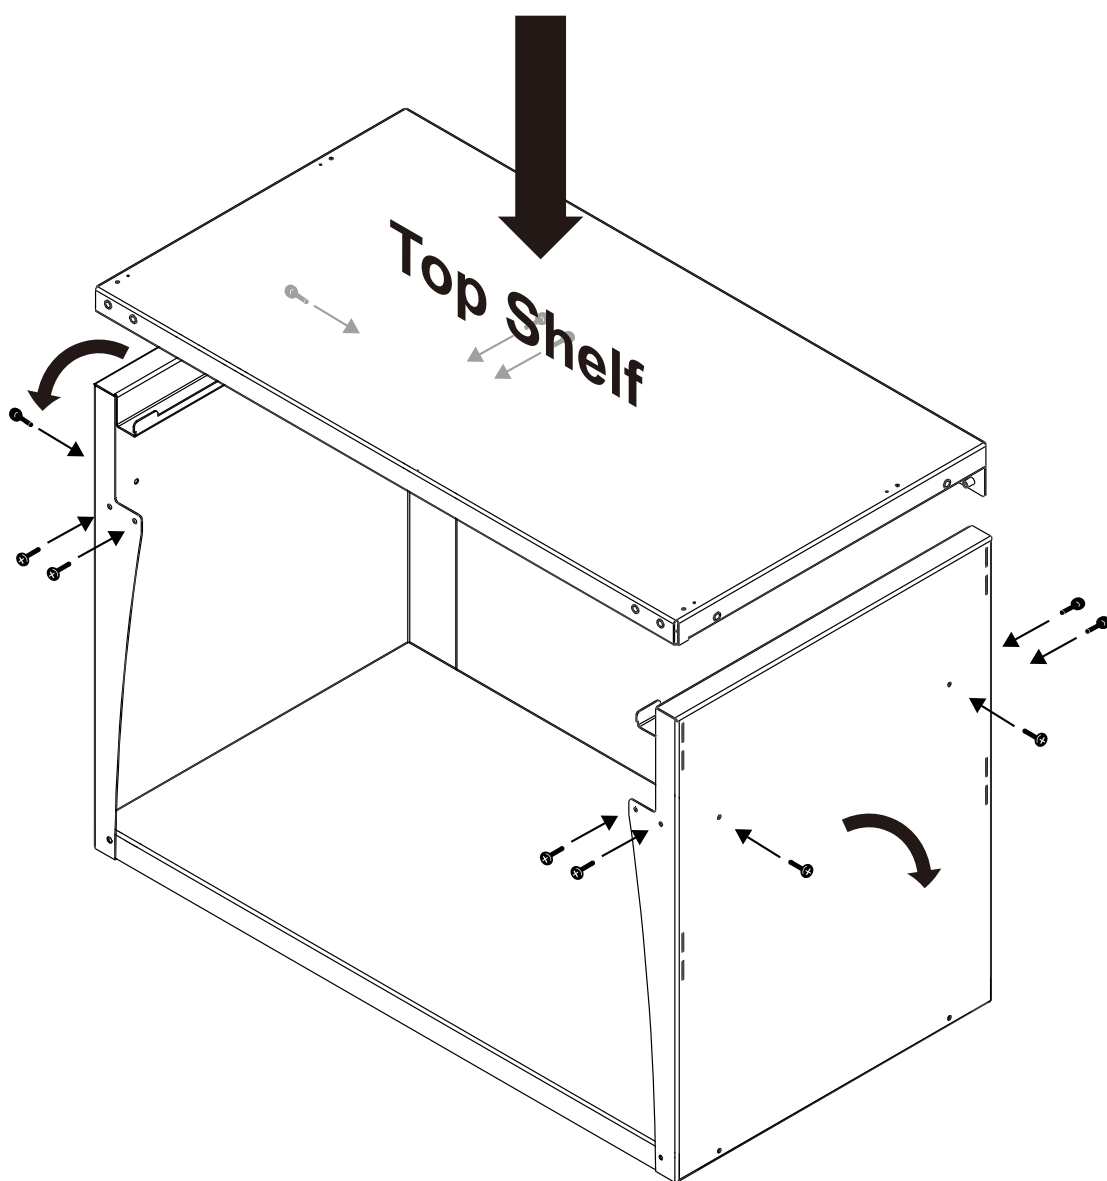

## Trolley Assembling Step.5

Step (5) - Once assembled the four main componets, it should look like the drawing below.  
Turn trolley up side down and attach the four catsors.

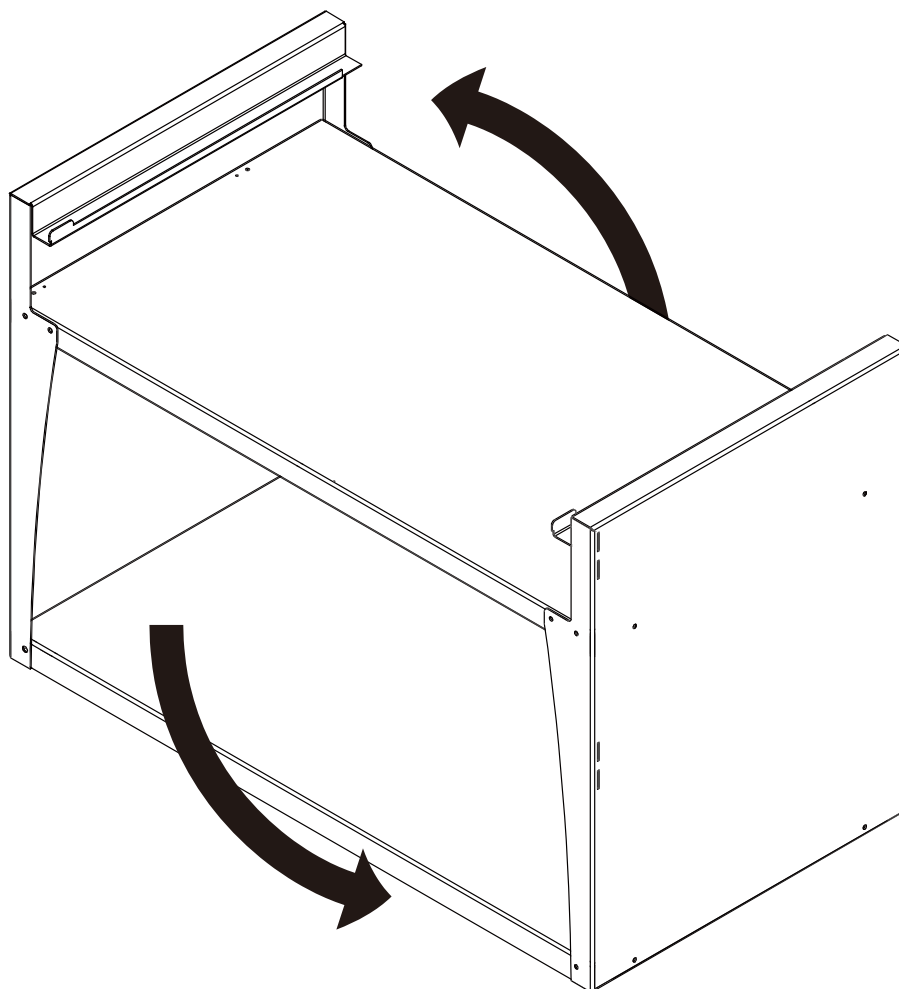



## Trolley Assembling Step.6

Step (6) - Attach all four castors.

- A.** Fit the castor brackets to each corner as shown.  
Make sure the large washer is in place over the captive nut.  
Tighten the 3/8" bolt fully before the castor wheel is fitted.

Attach the Castor bracket with the 3/8" bolt provided.



- B.** Fit each castor wheel to the brackets.




- C.** Now the caster units are ready to roll. You can now stand trolley back up right.




## Trolley Assembling Step.7

Step (7) - Turn the trolley upright so it is sitting on all four wheels. Tighten every single 6mm screws until they are tight.

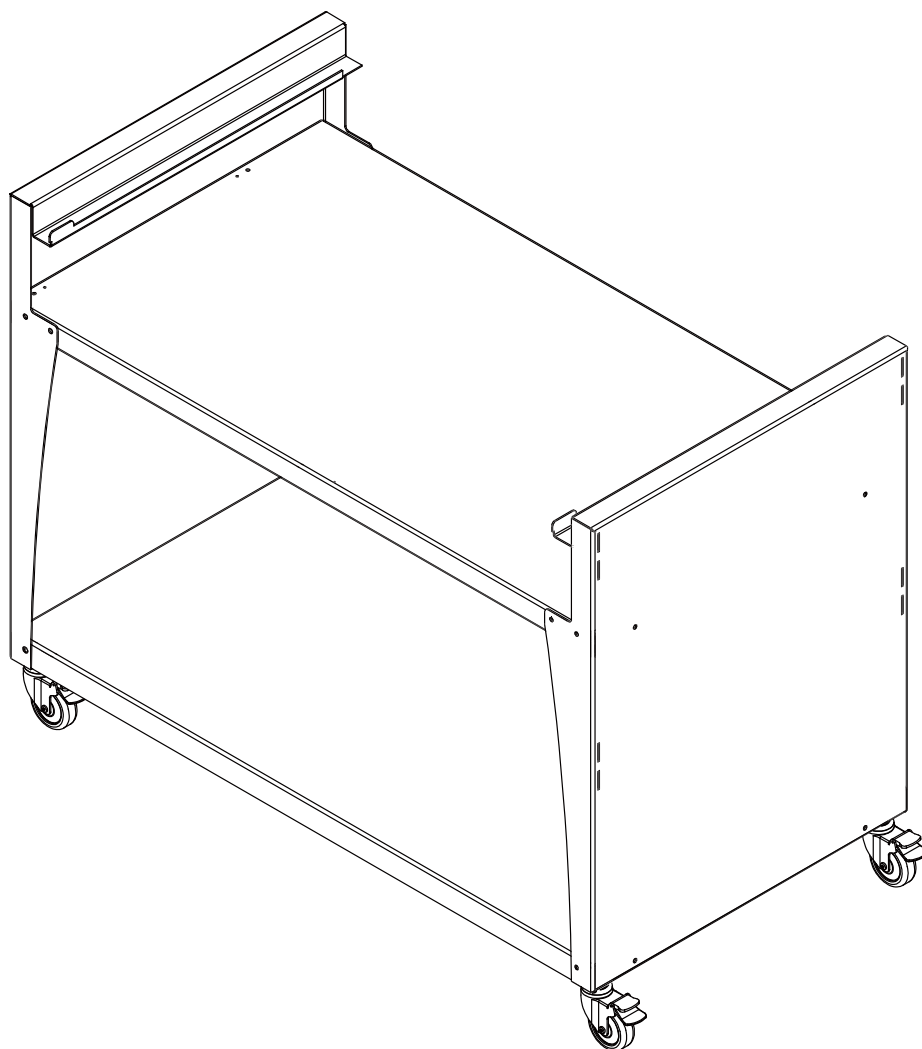

## Trolley Assembling Step.8


Step (8) - Attach the side tables, fit the tags into the corresponding slots on the sides of the main body to complete the trolley assembly.

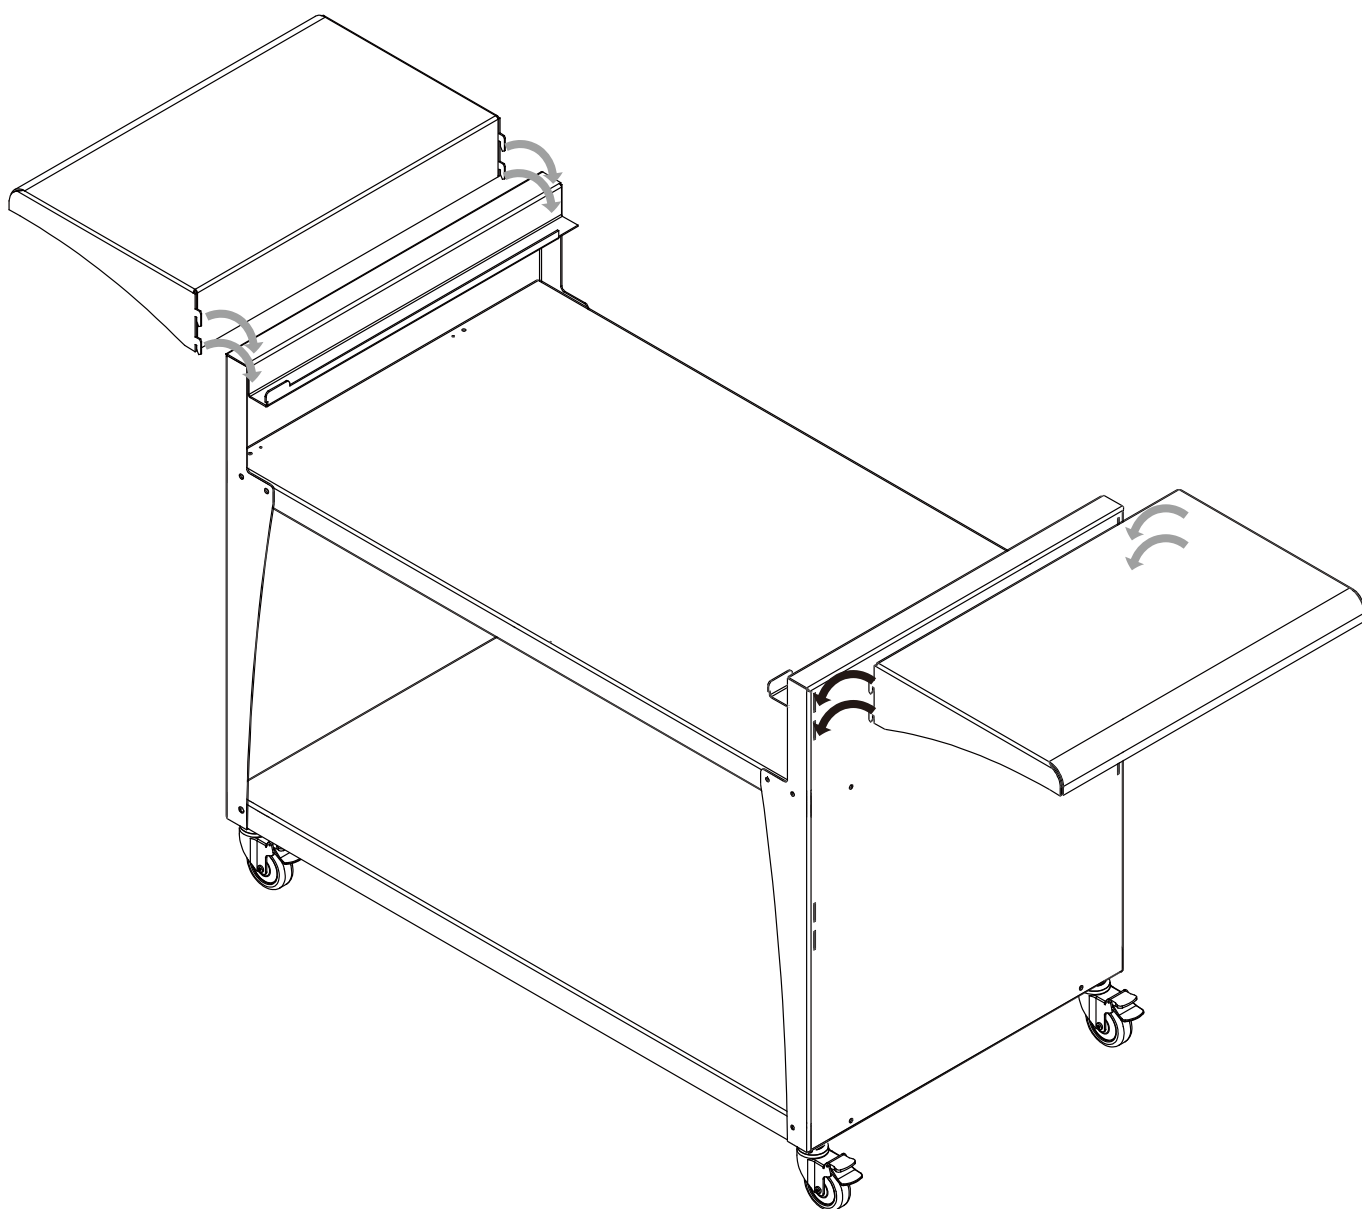

## Trolley Assembling Step.9

Step (9) - Lift oven evenly and place inside trolley centre, making sure the oven is sitting nicely on angles.

\*The warming drawer shown in the drawing is an optional product. Place oven on trolley before installing warming drawer.

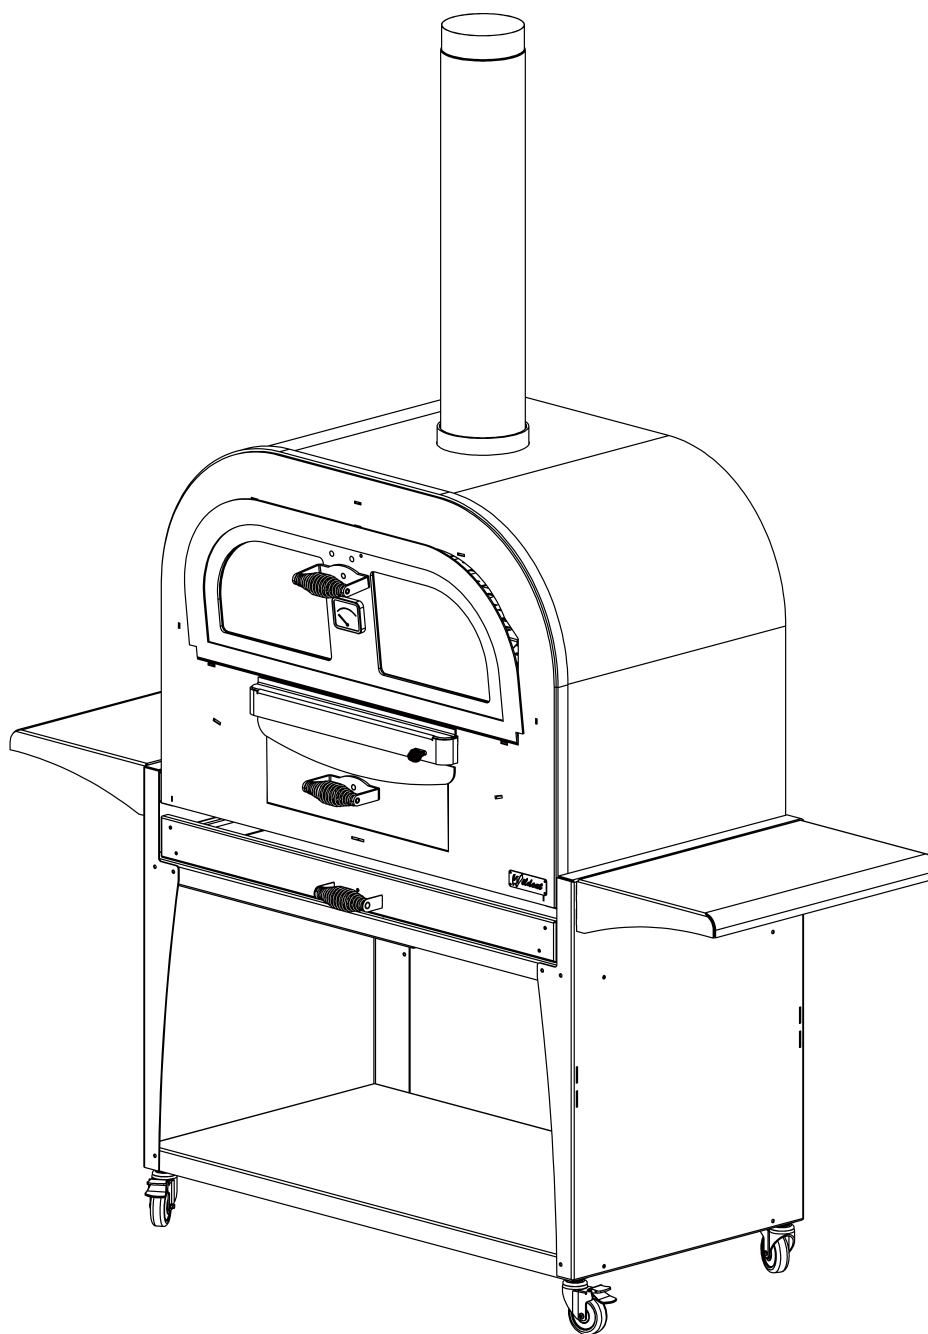

## Maintenance & Safe Operation

The heavy duty powder coated finish on your Wildcat Pizza Oven Trolley should require no more than the occasional wipe with a damp cloth to keep it looking good. Heavier food stains can be safely removed with a non abrasive proprietary household cleaner. Occasionally it may be necessary to re-tighten the screws.

### ***SAFETY WARNING:***

With a Wildcat Pizza Oven fitted, the Oven/Trolley combination is very heavy and will require a minimum of 2 adults to move it safely on flat smooth surfaces only.

- ***Do not*** attempt to move the Oven/Trolley combination on uneven ground.
- ***Never*** attempt to move the Oven/Trolley whilst there is an active fire in the oven, or while hot.
- Ensure all castors are locked before using the Oven.
- ***Do not*** operate the Oven on uneven or sloping ground.

Don't forget to check our interactive website for lots of recipes, tips and tricks and cooking video demonstrations. Members can also share their own recipes with other satisfied Wildcat Woodfired Oven owners at


**<http://www.mypizzaoven.com.au>**

We take this opportunity to thank you for your purchase and trust that you and your family will enjoy many hours of outdoor gourmet cooking!



## Contact Information

Wildcat Industries maintains a comprehensive web site for customer convenience. For service or general enquiries please try our website first, or for further assistance contact Wildcat Industries.

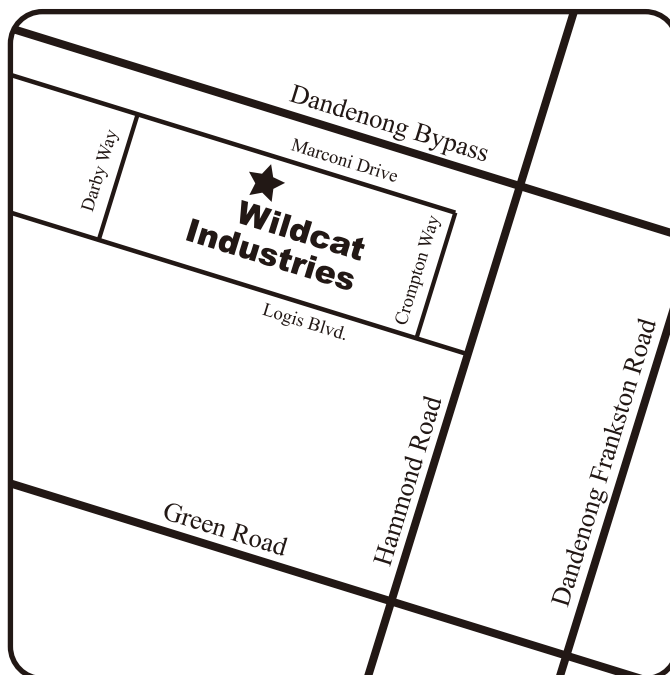

**Ad:** 35 Marconi Drive, Dandenong South, VIC 3175

**Ph:** (03) 9794 9956 **FAX:** (03) 8668 1677

**E-mail:** sales@wildcatindustries.com.au

<http://www.mypizzaoven.com.au>

<http://www.wildcatindustries.com.au>

Due to Wildcat Industries (Aust) Pty. Ltd. ongoing commitment to product quality and improvement we reserve the right to alter products and/or specifications without notice.

© Copyright 2015 Wildcat Industries (Aust) Pty. Ltd.

## Accessories & Other Products

Wildcat Industries are constantly striving to improve our existing range and develop new and innovative products. Here are just a few!


**Wildcat 8000 Oven Cover**



**Pizza Peel-stainless steel  
with a solid timber handle**



**Wildcat 8000 Warming Drawer**

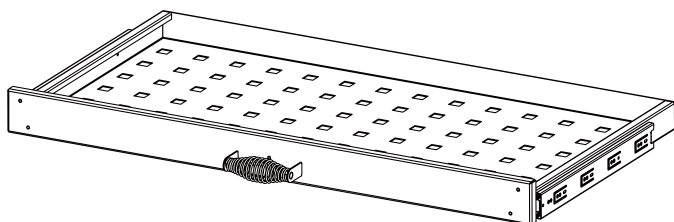

**Pizza Trays**



**Wildcat Flue Kits**

