

Fitting The Optional Warming Drawer


The Wildcat Trolley warming drawer is supplied complete and assembled and only needs to be attached to the trolley using the 4 nuts supplied.





Oven on Trolley, prior to fitting the warming drawer.



Warming Drawer, ready to fit to trolley. (View from base)

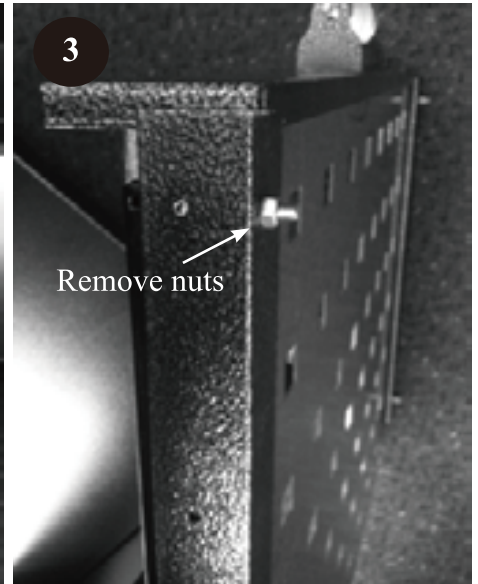



Remove the 4 nuts from the underside of the drawer brackets and set aside. These will be used later.

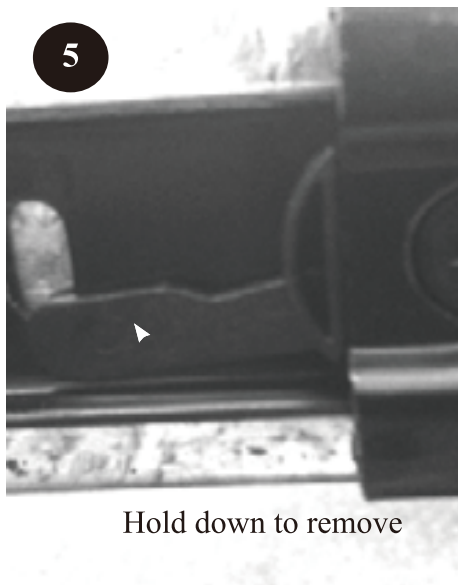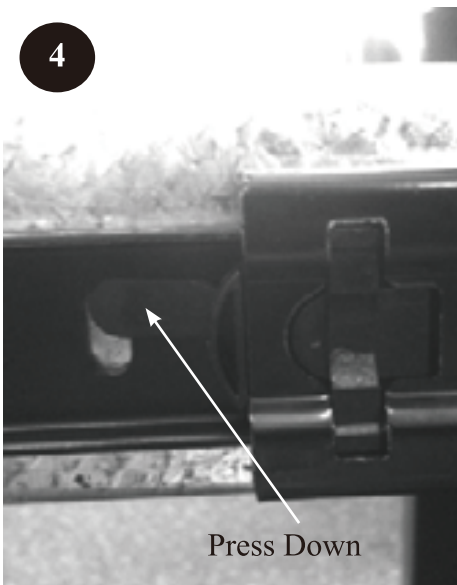



Remove the drawer from the brackets. Press and hold the black clip down (Shown above) While holding the clip down, slide the bracket out then repeat for other side. (The drawer can be removed from the trolley at any time by repeating this process, but the brackets must be removed separately)

Fitting The Optional Warming Drawer

Now fit the left and right brackets into the corresponding holes on the trolley shelf. (See 7 & 8 below) Fit the nuts (removed previously) to the studs protruding through the shelf and tighten.

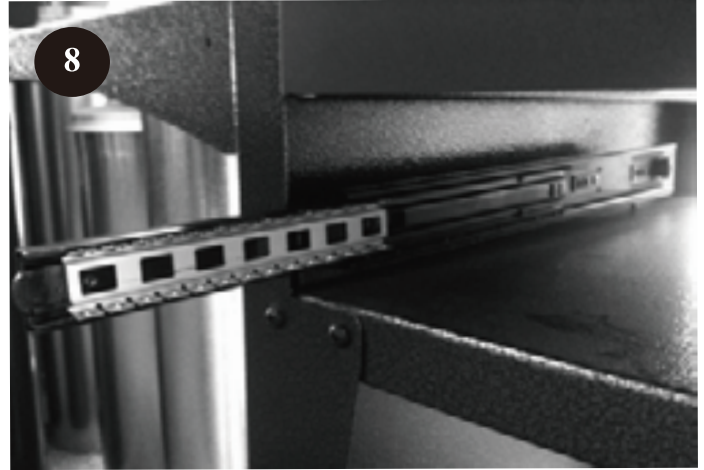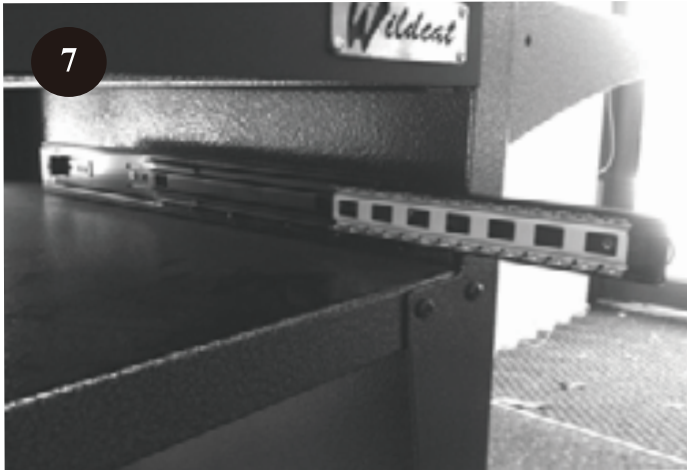

Fit the drawer onto the brackets and gently push the drawer closed, there will be a slight resistance before the slide engages. Close the drawer all the way, then open and close it several times to ensure correct operation.

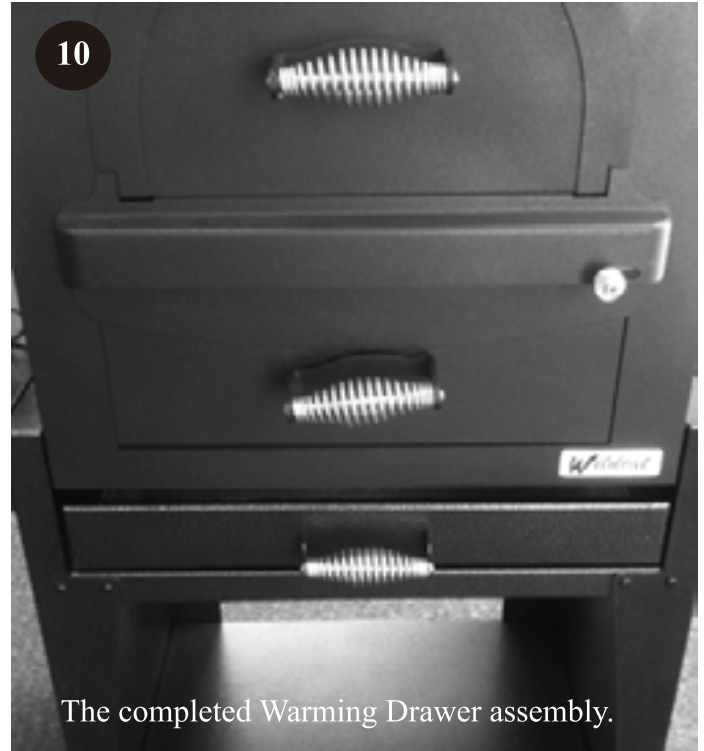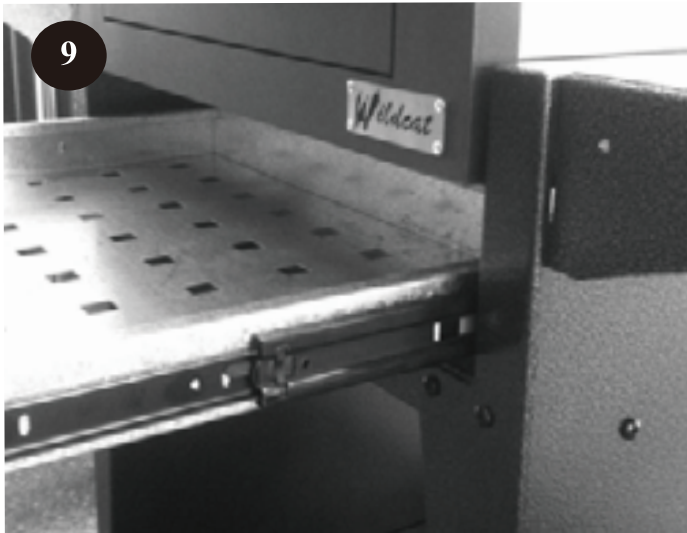

The completed Warming Drawer assembly.