




# **Trolley Assembly Instruction**

for Wildcat 5000 Pizza Oven

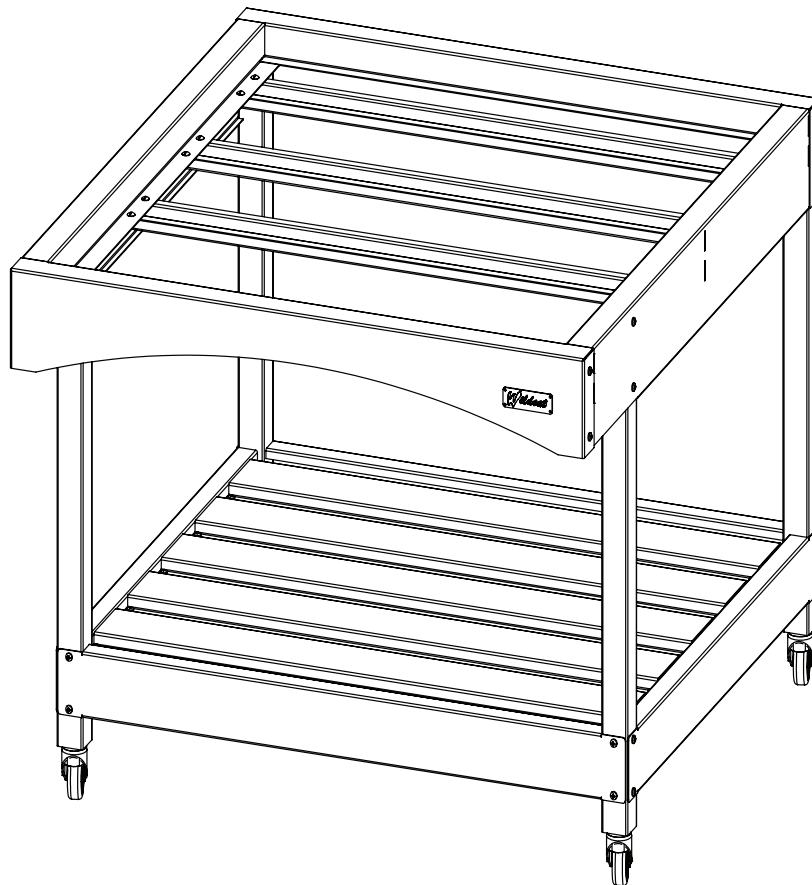

## Components

### Carton Contents



1 x LHS Top Panel



1 x RHS Top Panel



2 x Side Bottom Brace



1 x Front Panel (with Wildcat badge)




1 x Rear Top Panel



2 x Front/Rear Bottom Brace



3 x Cross Braces



4 x Triangular Braces



5 x Woodstack Panels



4 x 50mm Square Tube Legs



4 x Lockable Castors with 10mm bolts



68 x M6x16 Black Pan Head Screws



12 x M6x16 Countersunk Philips Head Screws



52 x M6 Flange Nuts


### \*Tools:

- No.2 Philips head screwdriver
- Cordless drill with Philips head bit
- 2 x sml shifters
- or
- 1 x 10mm socket
- 1 x 10mm spanner
- 1 x 16mm spanner

## Assembling Step. 1 & 2


Step (1) - Unload all of the components and assemble the 'RHS' + 'LHS' bottom braces to x2 of the legs and ensure the nutserts on the legs are facing outwards and that the nutserts on the braces (both RHS + LHS) are facing upright.

Using the **6mm black pan head screws**, keeping them loose (only finger tight).

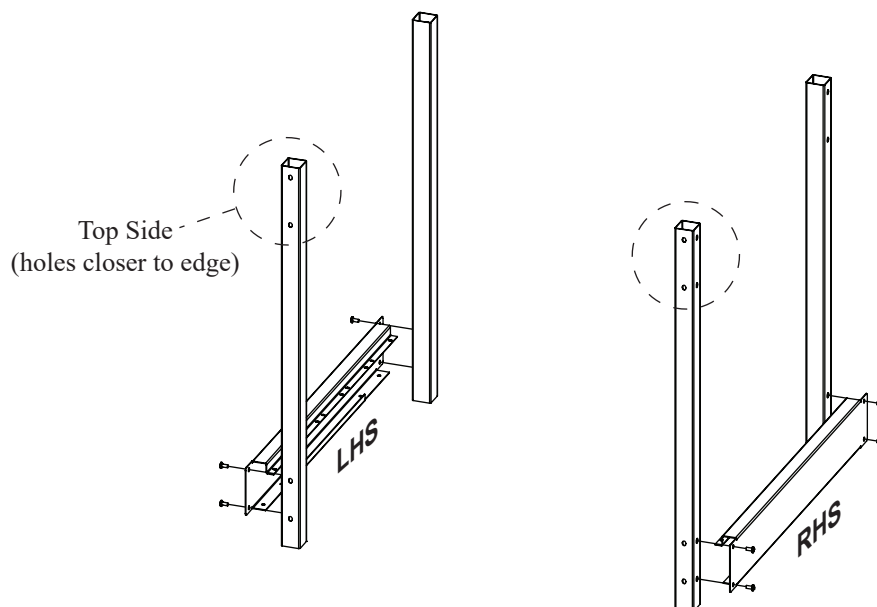

Step (2) - Now attach both **Front Bottom brace** and **Bottom Rear brace**.

Remember to keep all 6mm black pan head screws finger tight.

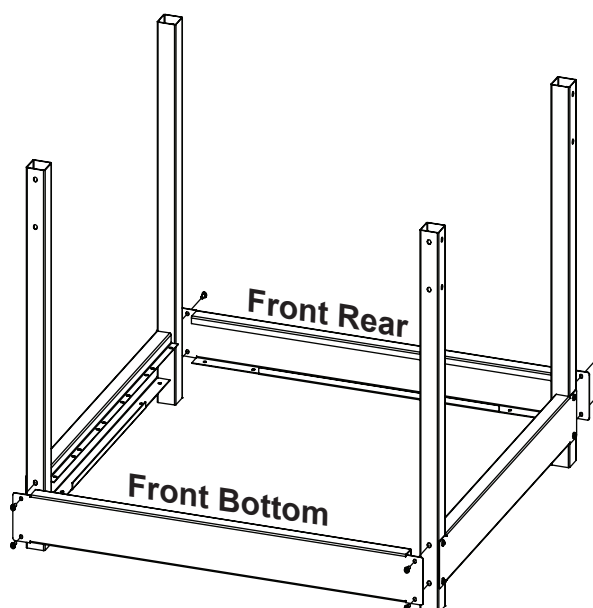


## Assembling Step. 3 & 4

Step (3) - Attach the **RHS + LHS Top** panels to the legs.

Simply sit the panels on the legs and align the holes on the sides.


Screw the holes for both sides (finger tight).

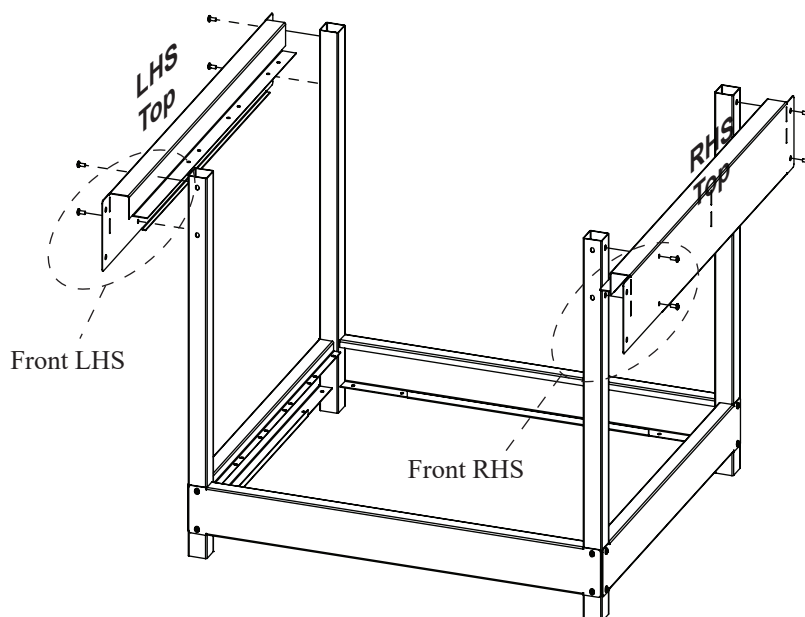

Step (4) - Now attach the **Front Top** panel (with the WILDCAT badge).


Just simply align the holes for side panels.

Use the 6mm black pan head screws with flange nuts and continue to keep the only finger tight.

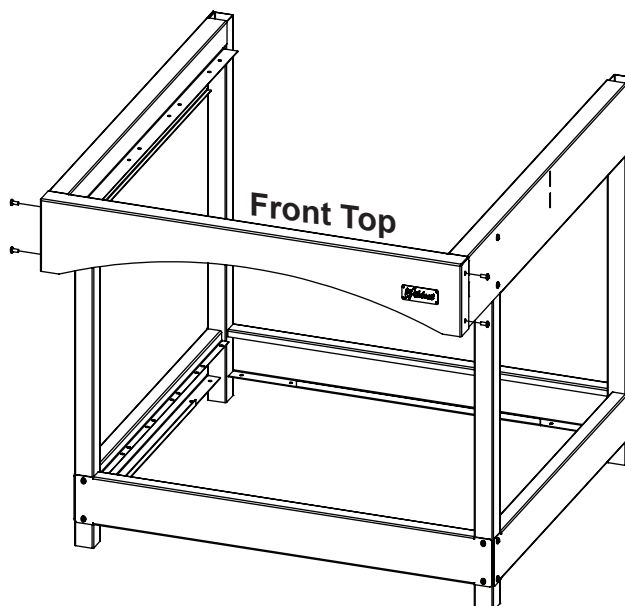


## Assembling Step. 5 & 6

Step (5) - Now it's time to attach the **Top Rear** panel. Sit the panel on the legs and align the holes. Use the 6mm black pan head screws and continue to keep the only finger tight.

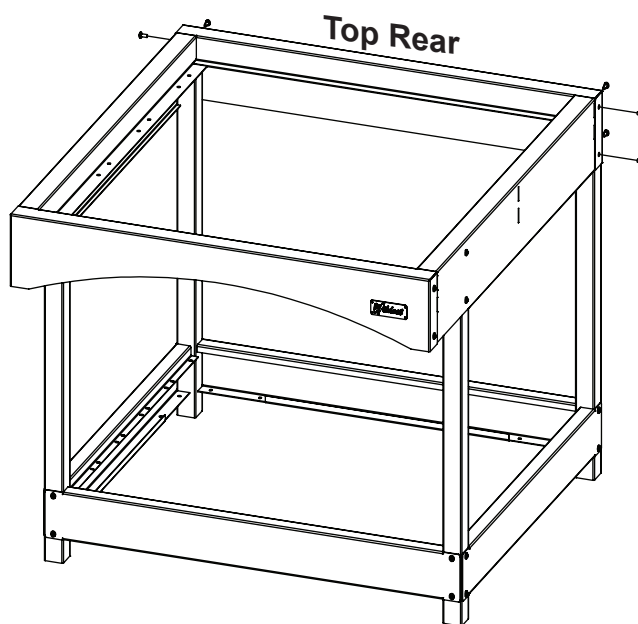


Step (6) - Now that your trolley is upright. It's time to install the **Triangular Braces** (x4). Place them out along the four legs and use 6mm black pan head screws with flange nuts.

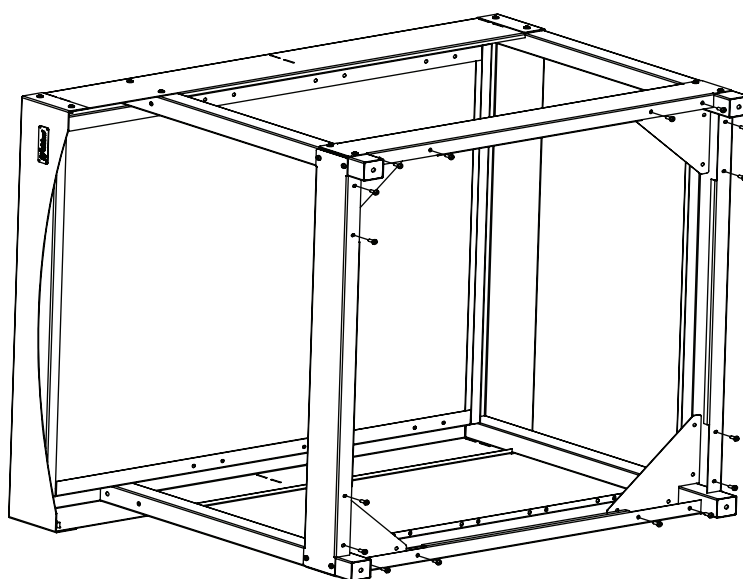


## Assembling Step. 7,8 & 9

Step (7) - Attach all four castors to the underside of each legs.

- A.** Fit the castor wheels to each corner as shown.  
Tighten the 10mm hex bolt using a 16mm spanner

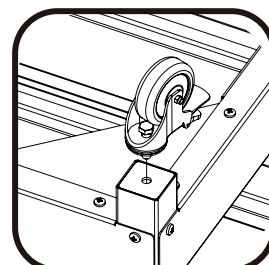


- B.** Now the castor units are ready to roll. You can now stand the trolley back up right.

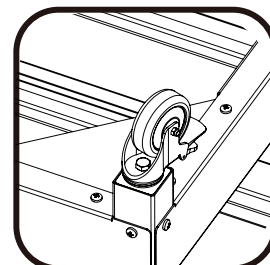


Step (8) - Place the 3x **Cross Braces** through the middle of the trolley and with 12 off 6mm countersunk head screws with flange nuts. You can now tighten all the way. Place the 5x **Woodstack Panel** and simply align the holes on the two bottom side braces with 20 off 6mm black pan head screws with flange nuts. You can now tighten all the way.

Step (9) - Using a cordless drill go around and tighten every screws.  
Ensuring all are now tight. Be careful not to overtighten and burr the head

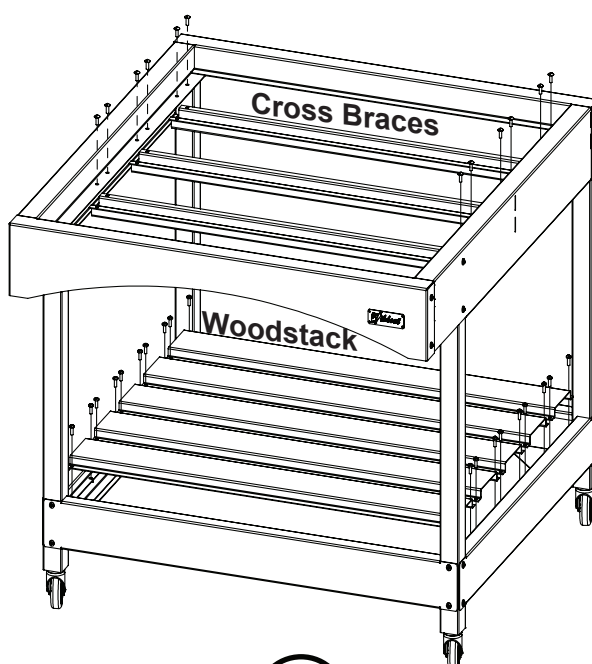


## Assembling Step. 10 & 11

Step (10) - Insert the stainless steel front tray and white fibre ceramic board into the top of the trolley and push down flush w/ trolley.

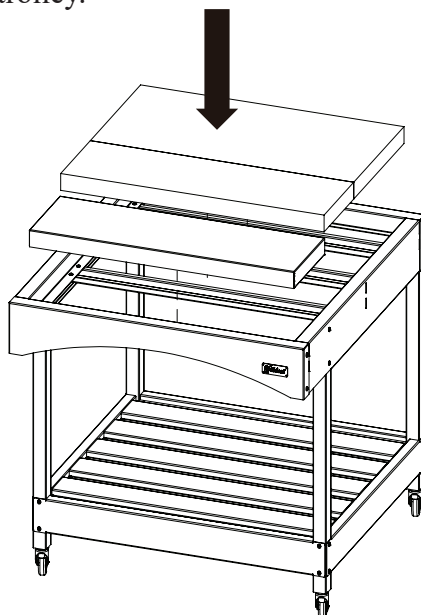

Step (11) - Place the Wildcat 5000 oven on top of the trolley and if your oven is stainless steel, remove stainless steel protector before first firing.

**\*The side tables shown in the drawing are sold separately.**

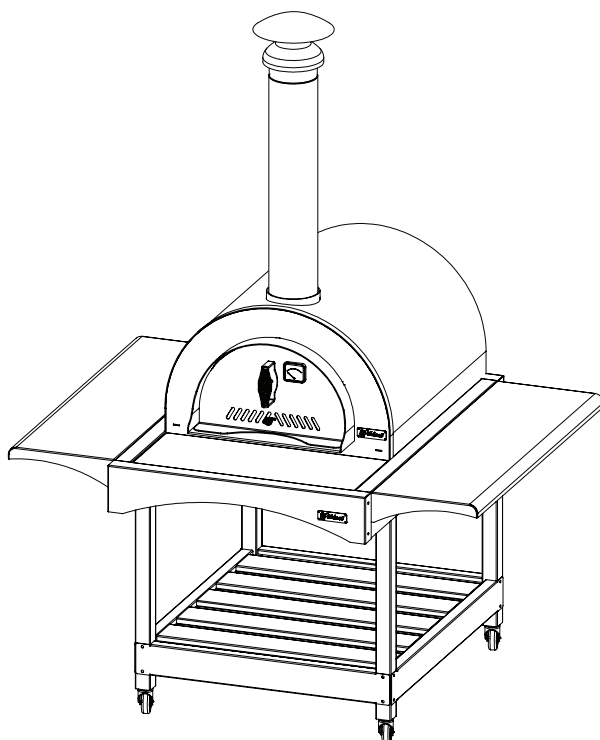

## Maintenance & Safe Operation

The heavy duty powder coated finish on your Wildcat Pizza Oven/Trolley should require no more than the occasional wipe with a damp cloth to keep it looking good. Heavier food stains can be safely removed with a non abrasive proprietary household cleaner. Occasionally it may be necessary to re-tighten the screws.

### ***SAFETY WARNING:***

With a Wildcat Pizza Oven fitted, the Oven/Trolley combination is very heavy and will require a minimum of 2 adults to move it safely on flat smooth surfaces only.

- ***Do not*** attempt to move the Oven/Trolley combination on uneven ground.
- ***Never*** attempt to move the Oven/Trolley whilst there is an active fire in the oven, or while hot.
- Ensure all castors are locked before using the Oven.
- ***Do not*** operate the Oven on uneven or sloping ground.

Don't forget to check our interactive website for lots of Recipes, Tips and Tricks and Cooking Video Demonstrations. You can join us on our FB page **mypizzaoven** and **Wildcat Owner's Den**. Members can also share their own recipes with other satisfied Wildcat Woodfired Oven owners at

**[www.mypizzaoven.com.au](http://www.mypizzaoven.com.au)**

We take this opportunity to thank you for your purchase and trust that you and your family will enjoy many hours of outdoor gourmet cooking!

## Contact Information

Wildcat Industries maintains a comprehensive web site for customer convenience. For service or general enquiries please try our website first, or for further assistance contact Wildcat Industries.

**Address:** 35 Marconi Drive, Dandenong South, VIC 3175

**Ph:** (03) 9794 9956 **Fax:** (03) 8668 1677

**Email:** [sales@wildcatindustries.com.au](mailto:sales@wildcatindustries.com.au)

**[www.mypizzaoven.com.au](http://www.mypizzaoven.com.au)**


**[www.wildcatindustries.com.au](http://www.wildcatindustries.com.au)**

Due to Wildcat Industries (Aust) Pty. Ltd. ongoing commitment to product quality and improvement we reserve the right to alter products and/or specifications without notice.


© Copyright 2015 Wildcat Industries (Aust) Pty. Ltd.

## Accessories & Other Products


Wildcat Industries are constantly striving to improve our existing range and develop new and innovative products. Here are just a few!

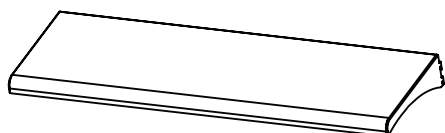


**Side Table for 5000 Trolley**

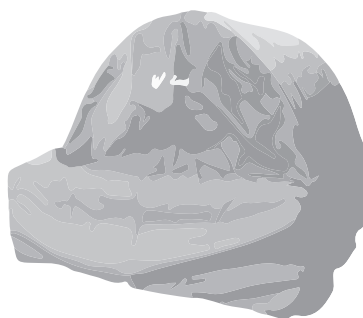


**Wildcat 5000 Oven Cover**

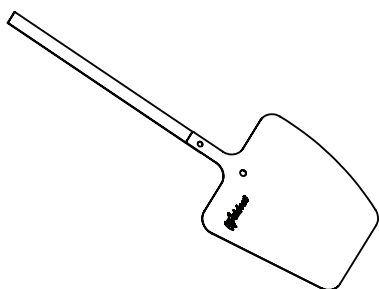


**Pizza Peel - stainless steel  
with a solid timber handle**

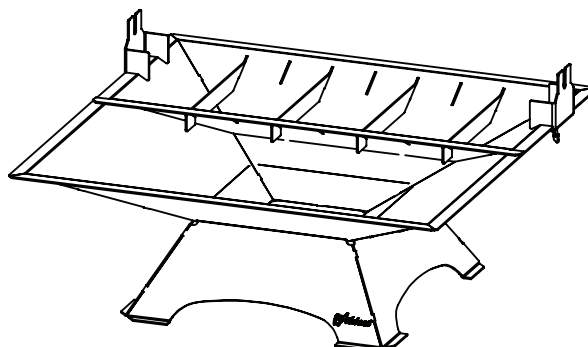

**Wildcat Firepit**

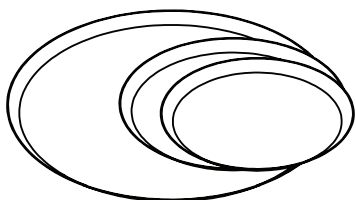

**Pizza Trays**

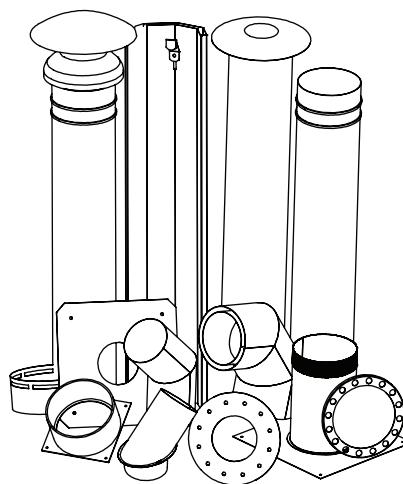

**Wildcat Flue Kits**