




Trolley Assembly Instruction

for Wildcat 8000 Pizza Oven

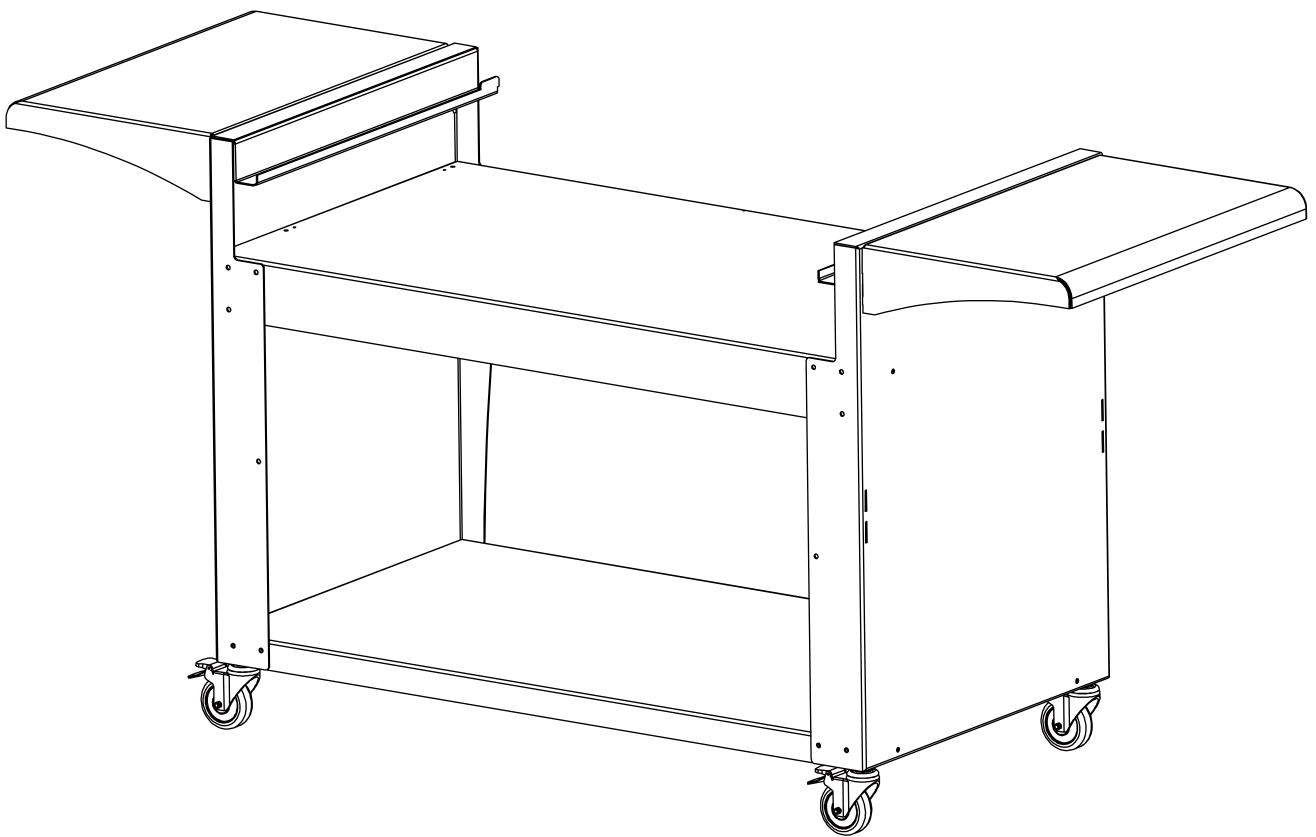

Contents

Components	Page.03
Assembly main body	Page.04
Assembly castor wheels	Page.05
Assembly castor wheels (cont.)	Page.06
Assembly top tables	Page.07
Finished Assembly	Page.08
Maintenance & Safe Operation	Page.09
Contact Information	Page.10
Accessories & Other Products	Page.11

Components

Carton Contents

- 1 x LHS leg panel
- 1 x RHS leg panel
- 1 x upper shelf panel
- 1 x lower shelf panel
- 2 x top tables
- 4 x lockable castor wheels
- 4 x castor wheel bolts
- 4 x large (36mm) washers
- 4 x small (22mm) washers
- 24 x 6mm x 16mm button head
phillips set screws.

Assembly Main Body

TOOL REQUIRED

Phillips screwdriver or cordless screwdriver with phillips bit.

5/8" Ring spanner, 10mm Ring spanner, adjustable spanner.

(1)

Ideally the trolley should be assembled on a smooth flat surface ie: carpet. Remove the components carefully from the carton and check that all components are supplied as per page 3 of this manual.

(2)

The panels are supplied with nutserts to make assembly simple so you only need to fit the screws .


Start by attaching the top shelf to the LHS leg panel (See diagram at right) with the 6mm x 16mm set screws provided. Leave the screws slightly loose.

(3)


Next attach the bottom shelf panel to the LHS leg panel using the same screw type. The wider edge section goes to the rear. Leave these screws slightly loose also.

(4)

Now attach the RHS leg panel the same way using the screws provided, again leaving them loose for the time being.

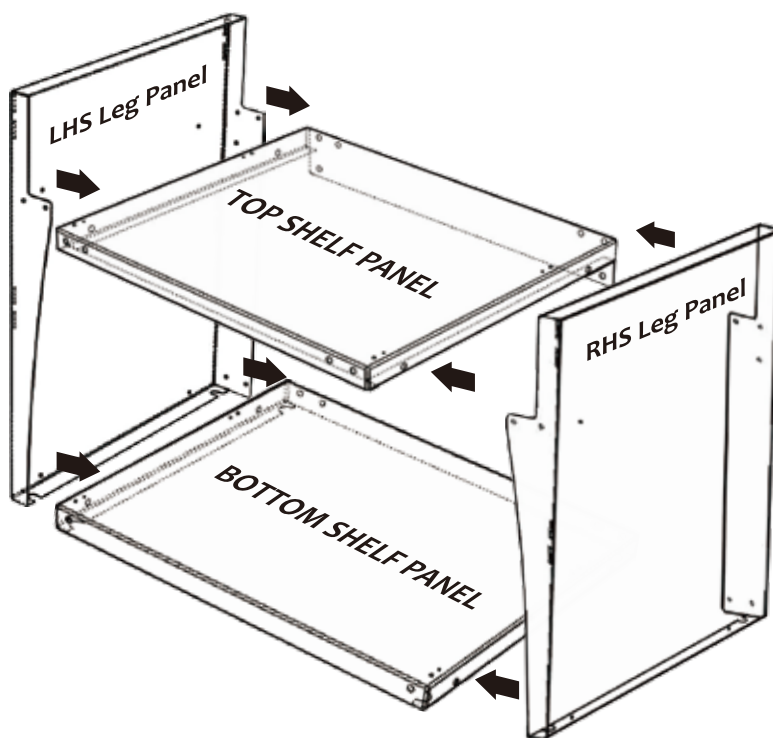

Once you have assembled the 4 main components, it should look like the picture above.

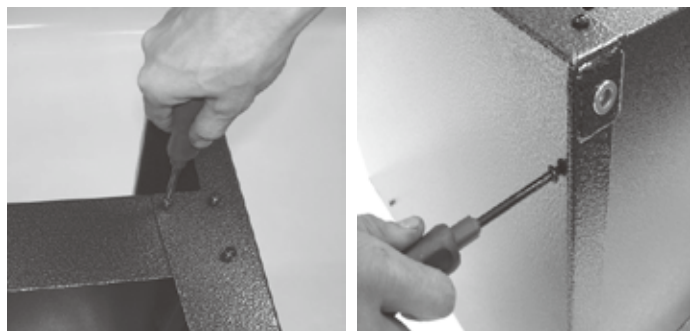



Assembly Castor Wheels

(5)

Next you will need to partially disassemble the castor wheels so they can be fitted to the trolley base.

(See right)


Using the 10mm ring spanner and an adjustable spanner, (Or 2 ring spanners) remove the wheel from the castor assembly and set the wheel, bolt and nut aside. Repeat for all 4 castor wheels.

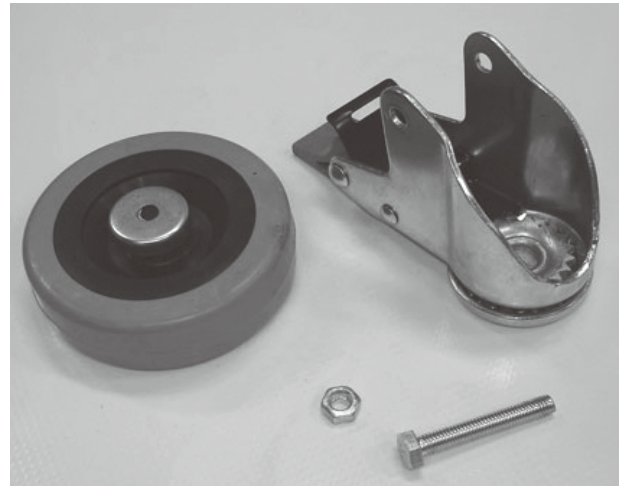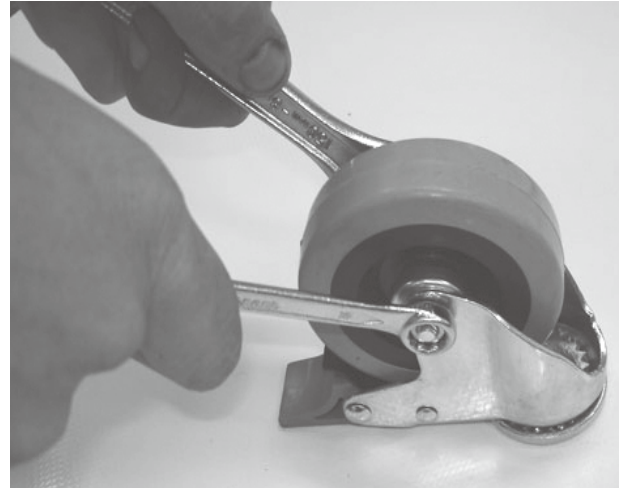

(6)

Invert the assembled trolley body so you can fit the castor wheels.

Before fitting the castor bracket, fit the large washer over the captive nut as shown.

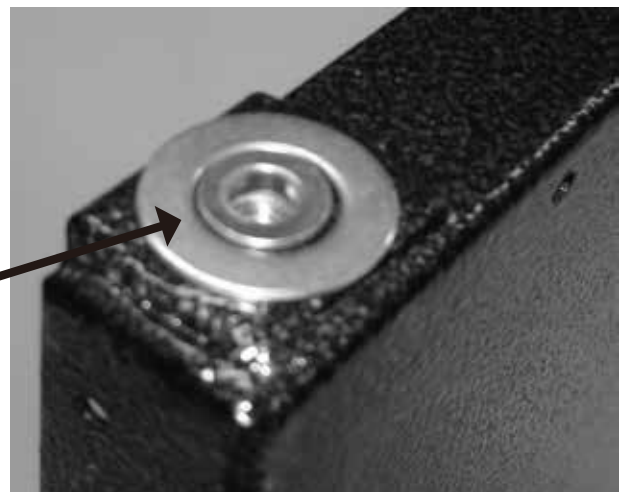


Assembly Castor Wheels

(7)

Fit the castor brackets to each corner as shown. Make sure the large washer is in place over the captive nut. Tighten the 3/8" bolt fully before the castor wheel is re-fitted as it is almost impossible to do so afterwards.

Attach the Castor bracket with the 3/8" bolt provided

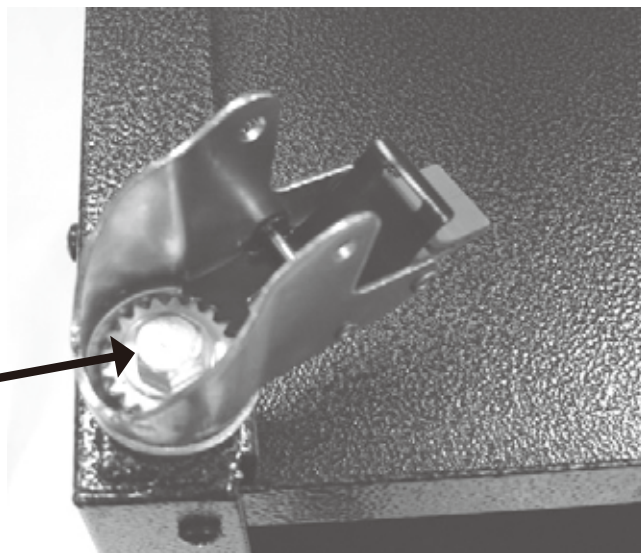

(8)


Refit each castor wheel to the brackets with the bolt and nut you removed earlier and tighten fully.



Assembly Top Tables


(9)

Tighten the screws in the main body fully and turn the trolley right side up onto the castors

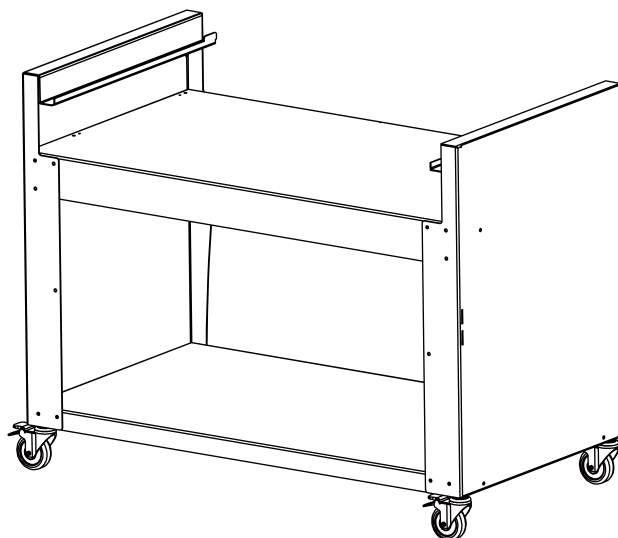


(10)

Fit the tags on the top tables into the corresponding slots on the sides of the main body to complete the trolley assembly.

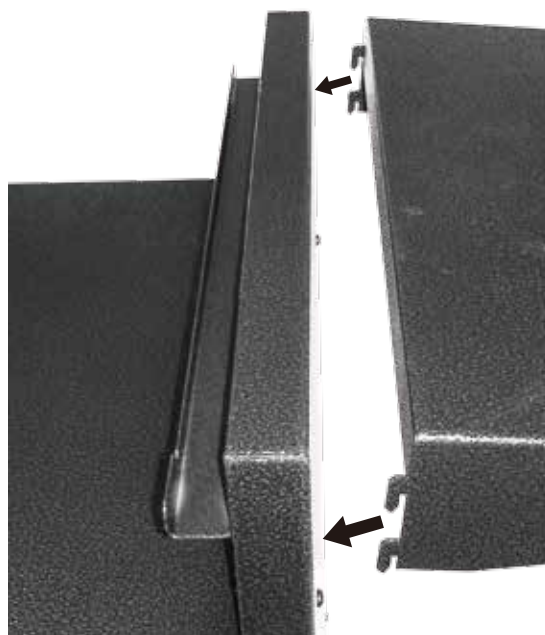

Finished Assembly

Please note that your Pizza Oven Trolley may differ slightly in appearance to those depicted below, however the assembly is the same.

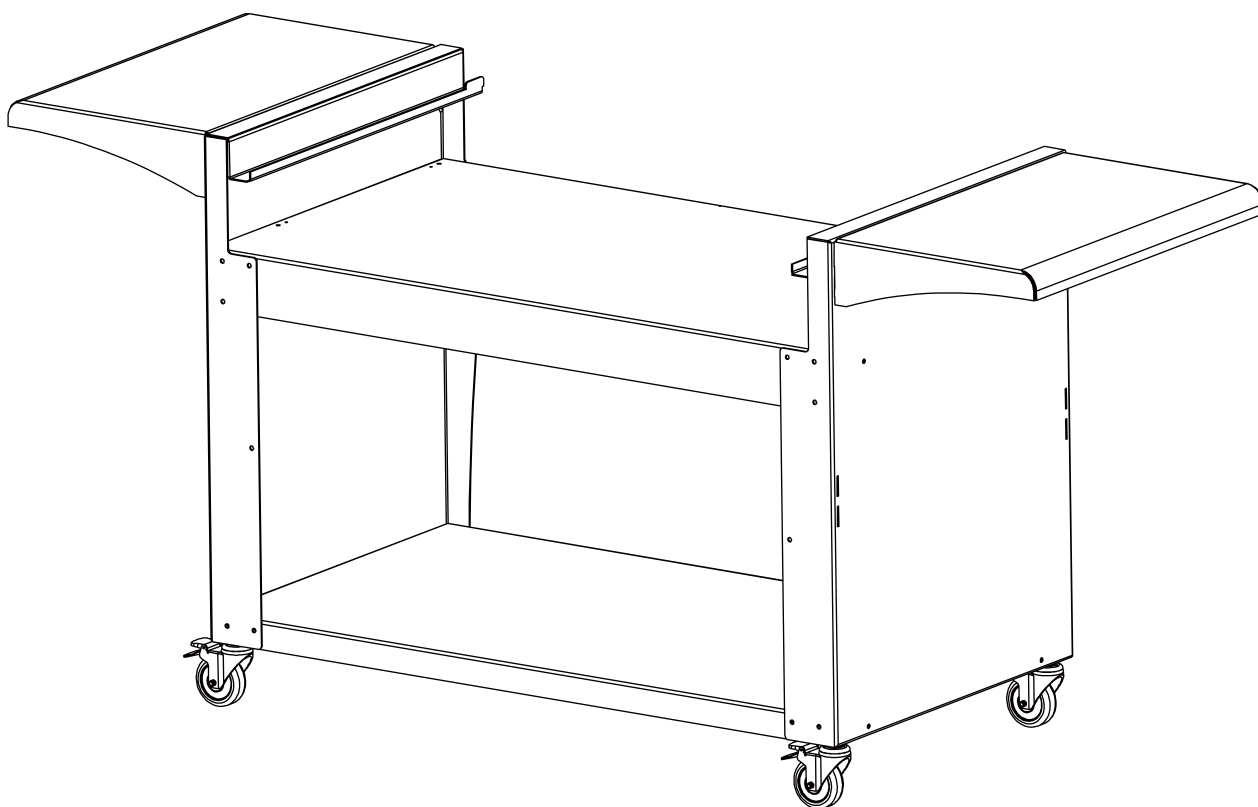

Maintenance & Safe Operation

The heavy duty powder coated finish on your Wildcat Pizza Oven Trolley should require no more than the occasional wipe with a damp cloth to keep it looking good. Heavier food stains can be safely removed with a non abrasive proprietry household cleaner. Occasionally it may be necessary to re-tighten the screws.

SAFETY WARNING:

With a Wildcat Pizza Oven fitted, the Oven/Trolley combination is very heavy and will require a minimum of 2 adults to move it safely on flat smooth surfaces only.

- ***Do not*** attempt to move the Oven/Trolley combination on uneven ground.
- ***Never*** attempt to move the Oven/Trolley whilst there is an active fire in the oven, or while hot.
- Ensure all castors are locked before using the Oven.
- ***Do not*** operate the Oven on uneven or sloping ground.

Don't forget to check our Interactive website for lots of Recipes, Tips and tricks and Cooking Video demonstrations. Members can also share their own recipes with other satisfied Wildcat Woodfired Oven owners at


<http://www.mypizzaoven.com.au/>

We take this opportunity to thank you for your purchase and trust that you and your family will enjoy many hours of outdoor gourmet cooking!



Contact Information

Wildcat Industries maintains a comprehensive web site for customer convenience. For service or general enquiries please try our website first, or for further assistance contact Wildcat Industries.

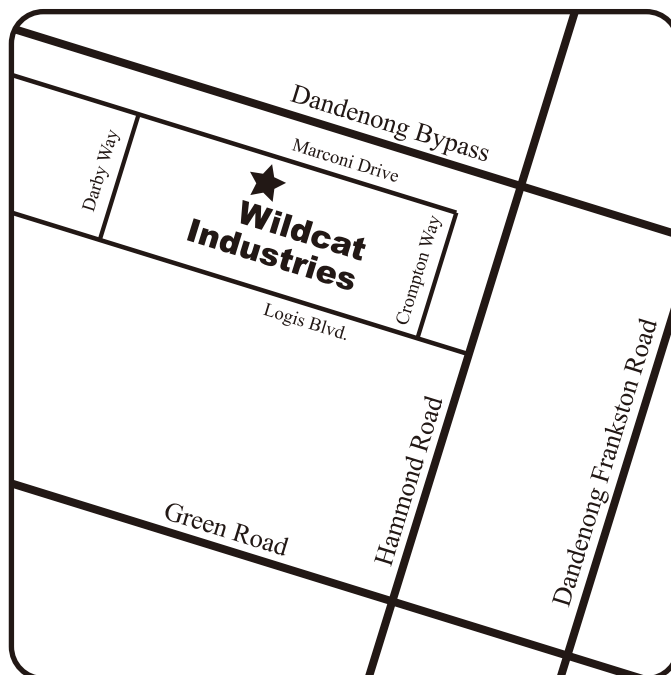

Ad: 35 Marconi Drive, Dandenong South, VIC 3175

Ph: (03) 9794 9956 **FAX:** (03) 8668 1677

E-mail: sales@wildcatindustries.com.au

<http://www.mypizzaoven.com.au/>

<http://www.wildcatindustries.com.au/>

Due to Wildcat Industries (Aust) Pty. Ltd. ongoing commitment to product quality and improvement we reserve the right to alter products and/or specifications without notice.

© Copyright 2015 Wildcat Industries (Aust) Pty. Ltd.


Accessories & Other Products

Wildcat Industries are constantly striving to improve our existing range and develop new and innovative products. Here are just a few!

Wild Pizza Oven Cover



Warming Drawer with smooth slide action, and spring handle to match Pizza Oven.

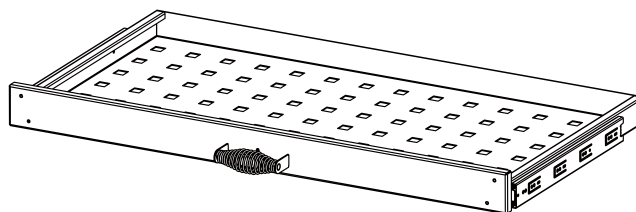

Pizza Peel-stainless steel with a solid timber handle



Flue Kits

